

## Accuray

Garanti: 12 ay  
Bu ¼r¼ne ait T¼rkiye i¼i kapı teslim fiyat ve teslim s¼resi i¼eren teklifimizi almak i¼in [info@yursat.com.tr](mailto:info@yursat.com.tr) e-posta adresine baŐvuru yapabilir ya da ayrıntılı bilgi i¼in +90 224 240 03 04 numaralı telefonumuzdan bizlere ulaŐabilirsiniz.  
**Accuray** Markası, tedarik s¼resi i¼in l¼tfen bizimle iletiŐime ge¼iniz.

*Firmamız Accuray T¼rkiye Distrib¼t¼r¼ veya temsilcisi deĐildir. Firmamız sipariŐ durumunda, belirtilen ¼r¼nlerde sadece Orjinal ve yeni ¼r¼n teklifi sunmaktadır. Bu sitede g¼sterilen ¼zel marka adları ve ticari markalar ilgili sahiplerinin m¼lkiyetindedir, talep durumunda kaldırılmaktadır.*



¼r¼n	A¼ıklama
<a href="#">069829-001</a>	PC BOARD
<a href="#">64844-005</a>	PC BOARD OPERATOR INTERFACE
<a href="#">5-067457-001</a>	PC BOARD
<a href="#">064829-003</a>	PC ASSEMBLY OPERATOR INTERFACE
<a href="#">2-066692-001</a>	PC PROCESSOR BOARD
<a href="#">3hne040921</a>	POWER SUPPLY
<a href="#">0195200</a>	
<a href="#">6-067472-001</a>	PC BOARD
<a href="#">067442-003</a>	PC BOARD COMM ADAPTER
<a href="#">61577-003</a>	PC ASSEMBLY PROM/RAM MEMORY
<a href="#">082638-001</a>	
<a href="#">061552-001</a>	PWA MICROPROCESSOR BOARD

<a href="#">64860-003</a>	PC BOARD FDI EE
<a href="#">64829-002</a>	PC ASSEMBLY OPERATOR INTERFACE
<a href="#">9-067451-002</a>	COMMUNICATION PROCESSOR
<a href="#">064860-001</a>	PWA DIGITAL INTERFACE BOARD
<a href="#">061552-002</a>	MPR
<a href="#">086348-001</a>	PC BOARD PWA7 ECF END COL FRAME
<a href="#">086329-004</a>	PWA, ECS, END COL SENSOR
<a href="#">065625-001</a>	ION CHAMBER DETECTOR
<a href="#">Qa-3-017948-003</a>	QA-3-017948-003
<a href="#">1-069846-001</a>	PC BOARD
<a href="#">086444-005</a>	PC BOARD PWA MPRC W/DIRECT FIBER OPT
<a href="#">6-046575-001</a>	REGULATOR HIGH CURRENT LOW VOLTAGE
<a href="#">67442-003</a>	PC BOARD COMM ADAPTER
<a href="#">017653-001</a>	
<a href="#">Gjr5-252100-R3161</a>	PLC CONTROL MODULE
<a href="#">100190-204(Ex100190-103)</a>	
<a href="#">083156-002</a>	PC BOARD
<a href="#">064829-002</a>	PC ASSEMBLY OPERATOR INTERFACE
<a href="#">2-064828-002-I</a>	OPERATOR INTERFACE I
<a href="#">069829-002</a>	INTERFACE CARD PWA FTI FRAME TMTR
<a href="#">64857-002</a>	PC BOARD POWER FAIL
<a href="#">061580-001</a>	PWA SUPPORT BOARD
<a href="#">067452-002</a>	PROC ASSEMBLY
<a href="#">64829-003</a>	PC ASSEMBLY OPERATOR INTERFACE
<a href="#">Ad-9-067442-003</a>	PC BOARD COMM ADAPTER
<a href="#">072042-002</a>	HEAD TRANSMITTER
<a href="#">086329-001</a>	PC BOARD PWA ECS SENSOR
<a href="#">061577-003</a>	PC ASSEMBLY PROM/RAM MEMORY
<a href="#">086370-001</a>	PC BOARD PWA ECPSR RO +15V / -15
<a href="#">083886-001</a>	PC BOARD UI

<a href="#">064844-001</a>	PWA PROCESS INTERFACE BOARD
<a href="#">Ad-8-061580-001</a>	PWA SUPPORT BOARD
<a href="#">084903-001</a>	PWA SP TEST PANEL
<a href="#">61580-001</a>	PWA SUPPORT BOARD
<a href="#">061595-003</a>	PC BOARD SENSOR SCANNER
<a href="#">086329-003</a>	PC BOARD SENSOR ECS
<a href="#">072044-003</a>	REFLECTION IR SENSOR
<a href="#">Ad-9-061577-003</a>	PC ASSEMBLY PROM/RAM MEMORY
<a href="#">083883-004</a>	PC BOARD INTERFACE
<a href="#">3-064843-002</a>	PROCESS INTERFACE CARD
<a href="#">086149-002</a>	PC BOARD SCANNER ANALOG
<a href="#">61552-001</a>	PWA MICROPROCESSOR BOARD