

## Daedal

Garanti: 12 ay  
Bu ¼r¼ne ait T¼rkiye i¼i kapı teslim fiyat ve teslim s¼resi i¼eren teklifimizi almak i¼in [info@yursat.com.tr](mailto:info@yursat.com.tr) e-posta adresine baŐvuru yapabilir ya da ayrıntılı bilgi i¼in +90 224 240 03 04 numaralı telefonumuzdan bizlere ulaŐabilirsiniz.  
**Daedal** Markası, tedarik s¼resi i¼in l¼tfen bizimle iletiŐime ge¼iniz.

*Firmamız Daedal T¼rkiye Distrib¼t¼r¼ veya temsilcisi deĐildir. Firmamız sipariŐ durumunda, belirtilen ¼r¼nlerde sadece Orjinal ve yeni ¼r¼n teklifi sunmaktadır. Bu sitede g¼sterilen ¼zel marka adları ve ticari markalar ilgili sahiplerinin m¼lkiyetindedir, talep durumunda kaldırılmaktadır.*



¼r¼n	A¼ıklama
<a href="#">003373701</a>	GEARBOX,I PREC 090 10:1
<a href="#">C6k2nk</a>	STEPPER SERVO CONTROL
<a href="#">Gax16hle100150</a>	GEARBOX PL115/APEX635
<a href="#">Hzr100</a>	ROLLER BEARING POS/MECH HLE 100
<a href="#">Cr4536</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Cr4546</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">800764402</a>	S ACTUATOR ASSY
<a href="#">002160705</a>	DRIVE ASSY .200L 506008ETES POS/MECH CLASSICS 506ST / ET
<a href="#">Gal03hle100150</a>	GEARBOX PL115/APEX620 3:1
<a href="#">000976901</a>	S MTRBLK RA60 GEARHEAD 30697 C POS/MECH HLE MISC
<a href="#">002116001</a>	DRIVE ASSY 20E POS/MECH MISC

<a href="#">512183505</a>	PL142-5:1 GEARBOX
<a href="#">002-1818-01</a>	Z-BRKT 3 9 406XR/406XR POS/MECH XR MISC
<a href="#">002-1817-01</a>	Z-BRKT 6 12 406XR/406XR POS/MECH XR MISC
<a href="#">Gba10hle80100</a>	GEARBOX PL90SF/HDX70 10:1 POS/MECH HLE MISC
<a href="#">Cr4910</a>	LINEAR POSITIONER 1.75INCH SQUARE
<a href="#">Gsh03hle150</a>	GEARBOX ONLY PL142 3:1
<a href="#">801757301</a>	DRIVE ASSY HLE150/NEMA 34
<a href="#">512111404</a>	GEARBOX,WLP70 W/UNIV FLG 4:1
<a href="#">Cr4965-10</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">C6k2</a>	6K S AXIS CONTROLLER
<a href="#">Cr4592d</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Csm232aen10n</a>	SM SERIES SERVO MOTOR
<a href="#">Mc7000</a>	CONTROLLER 4AXIS W/4000 CONTROL AND RS232C
<a href="#">100678401</a>	PLATE TRANSITION 412XR/LXR POS/MECH CLASSICS 100
<a href="#">100439301</a>	S Z BRACKET 506030ETMS D POS/MECH CLASSICS 506ST / ET
<a href="#">Sk050a-125</a>	SLIDE,KNOB LEAD SCREW POS/MECH MANUAL SK
<a href="#">Cr4916</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">002160729</a>	DRIVE ASSY .200L 506048ETES POS/MECH CLASSICS 506ST / ET
<a href="#">4546</a>	LINEAR SLIDE X-Y-Z STANDARD 0.5INCH STROKE
<a href="#">002158310</a>	DRIVE ASSY .200L 315101ATEP POS/MECH CLASSICS 300
<a href="#">Cr4536m</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">512152432</a>	GEARBOX,PL115 W/UNIV FLG 32:1
<a href="#">Cr4917</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">512121903</a>	GEARBOX,PLE80/90 UNIV FLG 3:1
<a href="#">Cr4914</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">Cr4945-04</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">Cr4915</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">Zprr060010x020</a>	S GEARBOX
<a href="#">Gzsc08hle80100</a>	GEARBOX,PRN-092-008 W/UNIV.FLG
<a href="#">002158110</a>	DRIVE ASSY .200L 310062ATEP POS/MECH CLASSICS 300

<a href="#">Cr4945-12</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">Cr4913</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">002-1645-01</a>	DRV ASSY .20L D1-800004CTES POS/MECH CLASSICS 800K
<a href="#">4467-L</a>	ST B/S S MIC X-Y W/LOCK POS/MECH MANUAL 4400STG
<a href="#">Cr4594</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">002115202</a>	DRIVE ASSY 50E POS/MECH MISC
<a href="#">002114401</a>	DRIVE ASSY 20E POS/MECH HLE MISC
<a href="#">002160703</a>	DRIVE ASSY .200L 506006ETES POS/MECH CLASSICS 506ST / ET
<a href="#">Gal08hle100150</a>	GEARBOX PL115/APEX620 8:1
<a href="#">Cr4527</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Cr4955-12</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">002158312</a>	DRIVE ASSY 1MML 315101ATEP POS/MECH CLASSICS 300
<a href="#">512152425</a>	GEARBOX, PL115 W/UNIV FLG 25:1
<a href="#">C6k8</a>	6K 8 AXIS CONTROLLER
<a href="#">9532m</a>	DRIVE MECHANISM POS/MECH MANUAL DRIVES
<a href="#">Gaj05hle80100</a>	GEARBOX PL90/APEX603 5:1
<a href="#">002171604</a>	COUPLING SET .5M POS/MECH HLE MISC
<a href="#">Gaj03hle80100</a>	GEARBOX PL90/APEX 603 3:1
<a href="#">Cr4547</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">512141916</a>	GEARBOX,WPL90 W/UNIV FLG 16:1
<a href="#">002164502</a>	DRV ASSY .20L D1-800006CTES POS/MECH CLASSICS 800K
<a href="#">002160733</a>	DRIVE ASSY .200L 506060ETES POS/MECH CLASSICS 506ST / ET
<a href="#">002111601</a>	DRIVE ASSY 20E POS/MECH MISC
<a href="#">002159307</a>	DRIVE ASSY .200L 406010LNEX POS/MECH CLASSICS 402LN
<a href="#">Cr4594m</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Cr4596d</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">029120090</a>	GEARBOX PL115 1 STAGE 3:1
<a href="#">404600xrms-D2h1i-1c1m3</a>	PRECISION SLIDE
<a href="#">Cr4544m</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG

<a href="#">002-1716-03</a>	COUPLING POS/MECH HLE MISC
<a href="#">002160712</a>	DRIVE ASSY .500L 506014ETES POS/MECH CLASSICS 506ST / ET
<a href="#">Cr4804</a>	CROSS ROLLER STAGES POS/MECH MANUAL 460047004800
<a href="#">002160726</a>	DRIVE ASSY .500L 506036ETES POS/MECH CLASSICS 506ST / ET
<a href="#">329120010</a>	PLANETARY GEARBOX PLE60 5:1 POS/MECH HLE 60
<a href="#">002114001</a>	DRIVE ASSY 20E POS/MECH MISC
<a href="#">002164511</a>	DRV ASSY .20L D1-800004CTEP POS/MECH CLASSICS 800K
<a href="#">8030054a</a>	S 406XR W/COUPLING SPACER
<a href="#">Cr4945-08</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">512141905</a>	GEARBOX,WPL90 W/UNIV FLG 5:1
<a href="#">Cr4542</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Gal05hle100150</a>	GEARBOX PL115/APEX620 5:1 A
<a href="#">Cr4532d</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Gsc10hle80100</a>	GEARBOX ONLY PL90 10:1
<a href="#">Gam08hle100150</a>	GEARBOX PL115/HDX115 8:1
<a href="#">Gay05hle80100</a>	GEARBOX PLE80/APEX603 5:1
<a href="#">002112801</a>	DRIVE ASSY 20E POS/MECH MISC
<a href="#">002159304</a>	DRIVE ASSY 5MML 406006LNEX POS/MECH CLASSICS 402LN
<a href="#">Cr4803</a>	CROSS ROLLER STAGES POS/MECH MANUAL 460047004800
<a href="#">Cr4596m</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">800180902</a>	S ACTUATOR ASSY
<a href="#">003120509</a>	BRG C/R SERIES 4-400 A POS/MECH CLASSICS 800K
<a href="#">002153810</a>	DRIVE ASSEMBLY
<a href="#">Cr4537</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Cr4965-12</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">002-1112-01</a>	DRIVE ASSY 20E POS/MECH CLASSICS 506ST / ET
<a href="#">C6k6</a>	6K 6 AXIS CONTROLLER
<a href="#">Coemzl6</a>	6 AMP DRIVE FOR ET ACTUATOR
<a href="#">404300xrms-D2h3l2-C4m4e1b1r1p1</a>	PRECISION TABLE
<a href="#">Cr4955-06</a>	CROSS ROLLER STAGES POS/MECH MANUAL

<a href="#">002112401</a>	DRIVE ASSEMBLY 20E POS/MECH CLASSICS 506ST / ET
<a href="#">002158309</a>	DRIVE ASSY .100L 315101ATEP POS/MECH CLASSICS 300
<a href="#">003703401</a>	GEARBOX SIPCO CARINI 55 3:1 POS/MECH HLE 150
<a href="#">Cgv6kl3e</a>	DRIVE,GEMINI SERVO
<a href="#">512152405</a>	GEARBOX,PL115 W/UNIV FLG 5:1
<a href="#">003360611</a>	GEARBOX,GAM,DS-WB-115-003G
<a href="#">404100xrmpd2h3/L1c3m3e1b1r1p1</a>	PRECISION SLIDE 14-5/8L X 3-3/4 WX 1-7/8T INCH
<a href="#">Cr4945-06</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">003710601</a>	GEARBOX KOLLMORGON 6:1 POS/MECH HLE MISC
<a href="#">512152505</a>	PL 115 5:1 GEARBOX
<a href="#">002-1607-09</a>	DRIVE ASSY .200L 506012ETES POS/MECH CLASSICS 506ST / ET
<a href="#">002153808</a>	DRIVE ASSY .020L
<a href="#">Cr4597</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Cr4534</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Cr4534m</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Cj0922jekmsv</a>	SERVO MOTOR
<a href="#">002160724</a>	DRIVE ASSY .500L 506030ETES POS/MECH CLASSICS 506ST / ET
<a href="#">003367501</a>	GEARBOX,PL115, 5:1 POS/MECH HLE MISC
<a href="#">Cr4536d</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Cr4965-08</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">002160718</a>	DRIVE ASSY .500L 506020ETES POS/MECH CLASSICS 506ST / ET
<a href="#">003296101</a>	CYL,RODLES,PARKER,63CF-RCTUC72 POS/MECH HLE MISC
<a href="#">003132101</a>	DRIVE MECHANISM
<a href="#">002-1686-03</a>	DRIVE ASSY 45:1 21000RT POS/MECH MANUAL MISC
<a href="#">002100501</a>	DRIVE ASSY 20E POS/MECH MISC
<a href="#">002168002</a>	DRIVE ASSY 90:1 20800RT POS/MECH ROTARY POS 200RT
<a href="#">002159301</a>	DRIVE ASSY .200L 406004LNEX POS/MECH CLASSICS 402LN
<a href="#">Cgv6ku6e</a>	DRIVE,GEMINI SERVO
<a href="#">Cr4542d</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG

<a href="#">Md23-03-202002</a>	DRIVE 3AXIS MD SERIES
<a href="#">Cr4542m</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">002169103</a>	DRIVE ASSY 45:1 21200RT POS/MECH ROTARY POS 200RT
<a href="#">002-1646-01</a>	DRIVE ASSY 5MML 800004CTES POS/MECH CLASSICS 100
<a href="#">002114801</a>	DRIVE ASSY 20E POS/MECH MISC
<a href="#">512141910</a>	GEARBOX,WPL90 W/UNIV FLG 10:1
<a href="#">Cgv6ku12e</a>	DRIVE,GEMINI SERVO
<a href="#">002112001</a>	DRIVE ASSY 20E POS/MECH CLASSICS 506ST / ET
<a href="#">Cr4965-04</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">4532</a>	ST B/S X-Y-Z 4532 POS/MECH MANUAL 4500STG
<a href="#">Gbb08hle80100</a>	GEARBOX PL90SF/NO34 8:1POS/MECH HLE MISC
<a href="#">Cr4532m</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">512152410</a>	GEAR BOX
<a href="#">Cr4955-08</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">002116801</a>	DRIVE ASSY 20E POS/MECH CLASSICS 506ST / ET
<a href="#">Csm231aenmsn</a>	SM SERIES SERVO MOTOR
<a href="#">Gal10hle100150</a>	GEARBOX PL115 /APEX620 10:1
<a href="#">Cr4593</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Cr4546m</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Cr4596</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Cr4592m</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">002113202</a>	DRIVE ASSY 50E POS/MECH MISC
<a href="#">003-1205-04</a>	BEARING,C/R SERIES POS/MECH CLASSICS 100
<a href="#">Cr4546d</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">Cr4912</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">002100901</a>	DRIVE ASSY 20E POS/MECH MISC
<a href="#">Gaj08hle80100</a>	GEARBOX PL90/APEX 603 8:1
<a href="#">Cr4572</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">002159303</a>	DRIVE ASSY .200L 406006LNEX POS/MECH CLASSICS 402LN
<a href="#">002113601</a>	DRIVE ASSY 20E POS/MECH MISC

<a href="#">Cr4532</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">512101403</a>	GEARBOX, PL70 W/UNIV FLG 3:1
<a href="#">Gsg10hle100150</a>	GEARBOX,WPL115 10:1 W/UNIV.FLG
<a href="#">Cn0922gekmsn</a>	COMPUMOTOR CONNECTOR
<a href="#">512131916</a>	GEARBOX,PL90 W/UNIV FLG 16:1
<a href="#">002160727</a>	DRIVE ASSY .200L 506042ETES POS/MECH CLASSICS 506ST / ET
<a href="#">Cr4965-06</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">512131908</a>	GEARBOX, PL90 W/UNIV FLG 8:1
<a href="#">Gax05hle100150</a>	GEARBOX PL115/APEX635 5:1 A
<a href="#">C6k4</a>	6K 4 AXIS CONTROLLER
<a href="#">002160723</a>	DRIVE ASSY .200L 506030ETES POS/MECH CLASSICS 506ST / ET
<a href="#">002163715</a>	DRIVE ASSY .200L 406048ETMS POS/MECH CLASSICS 408ST
<a href="#">Cr4955-10</a>	CROSS ROLLER STAGE POS/MECH MANUAL
<a href="#">002160707</a>	DRIVE ASSY .200L 506010ETES POS/MECH CLASSICS 506ST / ET
<a href="#">Cr4544</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">002114002</a>	DRIVE ASSY 50E POS/MECH MISC
<a href="#">002160720</a>	DRIVE ASSY .500L 506022ETES POS/MECH CLASSICS 506ST / ET
<a href="#">Cr4802m</a>	CROSS ROLLER STAGES POS/MECH MANUAL 460047004800
<a href="#">512141908</a>	GEARBOX,WPL90 W/UNIV FLG 8:1
<a href="#">Cr4955-04</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">Cr4945-10</a>	CROSS ROLLER STAGES POS/MECH MANUAL
<a href="#">003711601</a>	GEARBOX PLE120/115,UNIV FLG3:1 POS/MECH HLE MISC
<a href="#">002158810</a>	DRIVE ASSY .200L 324161ATEP POS/MECH CLASSICS 300
<a href="#">Cr4543</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">003360614</a>	GEARBOX,GAM,DS-WL-055-100G
<a href="#">002-1716-01</a>	CPLG, =/500 CTRS LS80/100 POS/MECH HLE MISC
<a href="#">Cr4582d</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG
<a href="#">002168003</a>	DRIVE ASSY 36:1 20800RT POS/MECH ROTARY POS 200RT

<a href="#">Cr4802</a> <a href="#">512152408</a>	CROSS ROLLER STAGES POS/MECH MANUAL 460047004800 PL115 8:1 GEARBOX
<a href="#">Czeta57102</a>	ZETA4 SYSTEM W/57-102 MOTOR
<a href="#">002158808</a>	DRIVE ASSY .020L 324161ATEP POS/MECH CLASSICS 300
<a href="#">Cr4533</a>	CROSS ROLLER STAGES POS/MECH MANUAL 4500STG