



## Eaton Corporation

Garanti: 12 ay  
Bu rne ait Trkiye ii kapı teslim fiyat ve teslim sresi ieren teklifimizi almak iin [info@yursat.com.tr](mailto:info@yursat.com.tr) e-posta adresine baŐvuru yapabilir ya da ayrıntılı bilgi iin +90 224 240 03 04 numaralı telefonumuzdan bizlere ulaŐabilirsiniz.  
**Eaton Corporation** Markası, tedarik sresi iin ltfen bizimle iletiŐime geiniz.

*Firmamız Eaton Corporation Trkiye Distribtr veya temsilcisi deĐildir. Firmamız sipariŐ durumunda, belirtilen rnlerde sadece Orjinal ve yeni rn teklifi sunmaktadır. Bu sitede gsterilen zel marka adları ve ticari markalar ilgili sahiplerinin mlkiyetindedir, talep durumunda kaldırılmaktadır.*

rn	Aıklama
<a href="#">Hfd3015I</a>	3P HFD 15 AMP BREAKER
<a href="#">Iponi</a>	COMMUNICATION MODULE OPERATOR NETWORK INTERFACE
<a href="#">Hfd3080I</a>	TYPE HFD, 3 POLE, 80A TRIP, 600V CLASS, 65KA AT 480V, LINE
<a href="#">Kd3400</a>	TYPE KD BREAKER 3P 400A 600VAC MAX 25KAIC @ 600V
<a href="#">Fd2020I</a>	TYPE FD BREAKER 2P 20A/ 250VDC MAX 10K / 600VAC MAX 18K AIC
<a href="#">Hmcp250a5</a>	TYPE HMCP BREAKER 3P 250A 600VAC MAX 25K AIC
<a href="#">Hfd3070I</a>	TYPE HFD, 3 POLE, 70A TRIP, 600V CLASS, 65KA AT 480V, LINE
<a href="#">Jd3250f</a>	CIRCUIT BREAKER 250AMP 3POLE 600V TRIP FRAMEONLY
<a href="#">Bj3200</a>	TYPE BJ BREAKER 200A/3 POLE 240V 10K REQ 6 SPACES
<a href="#">Ce15mn3a</a>	FOR REPLACEMENT ONLY

<a href="#">Hmc-P070m2c</a>	HMCP STANDARD MAG STYLE W/STEEL COLLARS
<a href="#">Sv9f30ac-5m0b00</a>	DRIVE 3HP 380-480VAC 5.3AMP
<a href="#">39pkhx</a>	OPERATOR INTF
<a href="#">Hfd3040l</a>	TYPE HFD, 3 POLE, 40A TRIP, 600V CLASS, 65KA AT 480V, LINE
<a href="#">Hm2p250l5ws10</a>	HM2P 2P 250A W/110-240VAC/110-125VDC LH SHUNT TRIP
<a href="#">Hmcp150u4c</a>	HMCP HIGH MAG STYLE W/STEEL COLLARS
<a href="#">3br4242l225</a>	3 PH/BR LOADCENTER 225AMLO 42/42 CIR. AL BUS NEMA 1
<a href="#">Ch630egnsys</a>	EMERGENCY POWER TRANSFER SYSTEM PORTABLE
<a href="#">Hfd3050l</a>	TYPE HFD, 3 POLE, 50A TRIP, 600V CLASS, 65KA AT 480V, LINE
<a href="#">Jd3225</a>	TYPE JD BREAKER 3P 225A 600VAC MAX 18KAIC @ 600V
<a href="#">An16kn0b</a>	STARTER SIZE3 3POLE 90AMP 240VAC COIL
<a href="#">W210mlcfc</a>	CONTACTOR REVERSING 3 PHASE COIL VOLTAGE 120
<a href="#">Jd3200</a>	TYPE JD BREAKER 3P 200A 600VAC MAX 18KAIC @ 600V
<a href="#">D520ta3</a>	ANALOG OUTPUT
<a href="#">A10-Fnoab</a>	STARTER SIZE4 135AMP 3POLE 120VAC COIL OPEN TYPE
<a href="#">Gd3050a3</a>	GD3050 W/AUX SW 1A1B RH
<a href="#">Hmcp050k2c</a>	HMCP 050K2C HMCP STANDARD MAG STYLE W/STEEL COLLARS
<a href="#">A200m3cac</a>	STARTER, SIZE 3, OPEN, 3 POLE, 120V / 60HZ COIL
<a href="#">A201k5ca</a>	CONTACTOR, SIZE 5, OPEN, 3 POLE, 120V / 60HZ COIL
<a href="#">13-16-1005</a>	5HP 480V AC DR
<a href="#">An16kn0a</a>	STARTER SIZE3 90AMP 110/120VAC 3PH NON-REVERSING
<a href="#">Fd-B3125</a>	TYPE FDB, 3 POLE, 125A TRIP, 600V CLASS, LOAD TERMINALS ONLY
<a href="#">15-564-107</a>	LOGIC D BOARD
<a href="#">Hfd3020l</a>	3P HFD 20 AMP BREAKER
<a href="#">511h995-98</a>	SOLENOID BRAKE ASSEMBLY SHOE TYPE 240V COIL
<a href="#">Kd2400</a>	TYPE KD BREAKER 2P 400A 600VAC MAX 25KAIC @ 600V
<a href="#">Hjd3250f</a>	FRAME ONLY HJD BREAKER 3P 250A
<a href="#">Hmcp030h1ca02</a>	CIRCUIT BREAKER 30AMP 3POLE 600VAC W/AUX SWITCH

<a href="#">An56bn0ac</a> <a href="#">1175t-Pmp-1100</a>	STARTER REVERSING SZ 0 18AMP 3POLE 120VAC W 1NO1NC OPERATOR PANEL 1.1AMP 23WATT 24VDC
<a href="#">Cn15sn3a</a>	CONTACTOR SIZE5 270AMP 3PH 3POLE 120VAC COIL W/1NO
<a href="#">1570k</a>	OPERATOR INTF
<a href="#">Hfd3060</a>	TYPE HFD, 3 POLE, 60A TRIP, 600V CLASS, 65KA AT 480V, LOAD
<a href="#">Hmcp100r3c</a>	HMCP STANDARD MAG STYLE W/STEEL COLLARS
<a href="#">D11vr10c</a>	RELAY PLUG IN PILOT DUTY 600VAC COIL 480V 60HZ
<a href="#">Cn15tn3ab</a>	NEMA OPEN 3P CONT SIZE 6 120V COIL
<a href="#">D520ra2</a>	INPUT MODULE
<a href="#">Cn55dn3ab</a>	CONTACTOR REV SIZE 1 27AMP 3POLE 120VAC 1 NO 1 NC
<a href="#">92-00684-00</a>	OPERATOR INTERFACE PANELMATE 2000
<a href="#">D520bc11</a>	PC BOARD
<a href="#">A211k1ca</a>	CONTACTOR REVERSING 3POLE 120VAC 60HZ
<a href="#">Nd3800t33w</a>	ND DIGITRIP 310 3P 800A 80% DUTY
<a href="#">Hmcg3800f</a>	TYPE HMCg MARK 75 SELTRONIC CIR BKR FRAME W/SOLID STATE
<a href="#">9-2698</a>	COIL, SIZE 6, SERIES B1, 120V/60HZ AND 110V/50HZ
<a href="#">1575k</a>	OPERATOR INTF
<a href="#">Fd3030l</a>	TYPE FD BREAKER 3P 30A 600VAC MAX 14K AIC .
<a href="#">Fd3060l</a>	TYPE FD BREAKER 3P 60A 600VAC MAX 18K AIC
<a href="#">D120-Pp1</a>	PROGRAMMING CONTOLLER PANEL
<a href="#">84-23772</a>	FIELD REGULATOR
<a href="#">5-Hdw-7-1-R-Ac</a>	COUNTER 5DIGIT 1:1RATIO
<a href="#">Ea090pn</a>	90A STARTER
<a href="#">92-01810-01</a>	OPERATOR INTERFACE PANELMATE 3000
<a href="#">Fd3100</a>	TYPE FD BREAKER 3P 100A 600VAC MAX 18K AIC
<a href="#">D520bc25</a>	COMMUNICATION BOARD
<a href="#">1585thx</a>	OPERATOR INTF
<a href="#">Ca3125</a>	CIRCUIT BREAKER 125AMP 3POLE 240VAC
<a href="#">Ce15nn3a</a>	FOR REPLACEMENT ONLY
<a href="#">Hmcp070j2</a>	HMCP LOW MAG STYLE W/ALUMINUM COLLARS

<a href="#">A200m2cac</a>	STARTER, SIZE 2, OPEN, 3 POLE, 120V / 60HZ COIL
<a href="#">Dh-361fdk</a>	30A/3P HD FUSIBLE SAFETY SWITCH 600VNEMA 12
<a href="#">A200m4cac</a>	STARTER, SIZE 4, OPEN, 3 POLE, 120V / 60HZ COIL
<a href="#">Ca3225</a>	CIRCUIT BREAKER 225AMP 3POLE 240VAC
<a href="#">D520bc4</a>	PCB COMMUNICATIONS LOGIC BOARD
<a href="#">92-00898-00</a>	OPERATOR INTF
<a href="#">Fd3050I</a>	TYPE FD BREAKER 3P 50A 600VAC MAX 18K AIC
<a href="#">D520fp2</a>	RACK POWER SUPPLY
<a href="#">D520bc33</a>	LOGIC CONTROL