

## Ge Rca

Garanti: 12 ay  
Bu ¼r¼ne ait T¼rkiye i¼i kapı teslim fiyat ve teslim s¼resi i¼eren teklifimizi almak i¼in **info@yursat.com.tr** e-posta adresine baŐvuru yapabilir ya da ayrıntılı bilgi i¼in +90 224 240 03 04 numaralı telefonumuzdan bizlere ulaŐabilirsiniz.  
**Ge Rca** Markası, tedarik s¼resi i¼in l¼tfen bizimle iletiŐime ge¼iniz.

*Firmamız Ge Rca T¼rkiye Distrib¼t¼r¼ veya temsilcisi deĐildir. Firmamız sipariŐ durumunda, belirtilen ¼r¼nlerde sadece Orjinal ve yeni ¼r¼n teklifi sunulmaktadır. Bu sitede g¼sterilen ¼zel marka adları ve ticari markalar ilgili sahiplerinin m¼lkiyetindedir, talep durumunda kaldırılmaktadır.*



¼r¼n	A¼ıklama
<a href="#">117d7314g1</a>	PC BOARD
<a href="#">12naa15e5a</a>	RELAY GROUND DISTANCE AUXILIARY 48/125/250VDC
<a href="#">118d1366g1</a>	PC BOARD GROUND DETECTION
<a href="#">137d5142g1</a>	PC BOARD AMS RATE LOGIC
<a href="#">06641254p0001</a>	SHAFT AUXILIARY
<a href="#">193c381aaq01</a>	HEAT SINK 36D877442ABG02 CONVERTER 60KVA
<a href="#">12gcx51b13a</a>	RELAY PHASE REACTANCE DISTANCE
<a href="#">193x-277ab-G02</a>	SIG LEV DET BD
<a href="#">186c8141g1</a>	PC BOARD
<a href="#">12jbcg53k6a</a>	RELAY-PROTCTV-DEV LB 67GB-TYPE JBCG-FORMAT RTS
<a href="#">117d7783g1</a>	PC BOARD
<a href="#">193x-219acg01</a>	FIELD WEAK BD

<a href="#">193x803bfg03</a>	POWER AMP BOARD
<a href="#">137d3051g01</a>	POWER SUPPLY BOARD
<a href="#">148d1193g04</a>	PC BOARD TIMER INTRFACE
<a href="#">193w-279aag03</a>	PC BOARD
<a href="#">0621l0447-G001</a>	PUSHBUTTON CARD
<a href="#">12ifc77a2a</a>	RELAY OVERCURRENT EXTREMELY INVERSE
<a href="#">0621l0462-G001</a>	PC BOARD
<a href="#">19l128rha</a>	CAPACITOR 1800V 1.2KHZ 1800 KVAR
<a href="#">193x369aag01</a>	COMMUTATION BD
<a href="#">12chc11a21a</a>	RELAY 125VDC 5AMP 60HZ TARGET COIL .2/2
<a href="#">0621l0437-G001</a>	I/O AUXILIARY CARD
<a href="#">193w-531acg01</a>	DIAGNOSTIC BD
<a href="#">10058b010h00c</a>	SYNC CHECK RELAY 110/250VDC
<a href="#">118d1380g1</a>	CIRCUIT BOARD
<a href="#">125d3618g1</a>	PC BOARD MSV AMP MSVB-MS
<a href="#">169c4740g01</a>	PC BOARD POWER LOAD UNBALANCE ANALOG
<a href="#">193x-741ac-G03</a>	POWER SUPPLY BD
<a href="#">12iav54e2a</a>	VOLTAGE RELAY 230V 60CYCLE
<a href="#">12pvd21b2a</a>	RELAY W/PROTECTOR 75/500V 50HZ 50/2AMP
<a href="#">117d7787g2</a>	PC BOARD
<a href="#">193x369acg01</a>	COMMUTATION BD
<a href="#">183-18-0350-0</a>	SERVO MOTOR W/ENCODER
<a href="#">115d2235g2</a>	PC BOARD PRESSURE SENSOR
<a href="#">1d300g152</a>	CLOSING COIL 76VDC
<a href="#">115d2236g1</a>	PC BOARD MOTOR POSITION INDICATOR
<a href="#">193x-528abg01</a>	INTERFACE BOARD
<a href="#">12ijd53c14a</a>	RELAY PERCENTAGE DIFFERENTIAL 3.2-8.7AMP
<a href="#">115d2227g4</a>	PC BOARD VOLTAGE CARD
<a href="#">12sly81a4d</a>	RELAY STATIC PHASE DISTANCE 120VAC 60HZ
<a href="#">2000cncncr17</a>	RACK MARK CENTURY 2000 4.8AMP 115VAC W/PWRSUPPLY

<a href="#">115d2219g2</a>	PC BOARD SPEED AUXILLARY
<a href="#">118d1377g3</a>	CIRCUIT BOARD PRESSURE LIMIT
<a href="#">145d4738g1</a>	PC BOARD BOST TEST
<a href="#">2000-U2kx04k0s</a>	DRIVE INVERTER 13AMP 380-480VAC
<a href="#">0621l0461-G001</a>	REVERSING ARMATURE INTERFACE
<a href="#">2000cncmcs</a>	CONTROL INTERFACE 1.2/0.6AMP 115/230VAC
<a href="#">193x-562-Acg-06</a>	G/P RELAY BOARD
<a href="#">117d7374g3</a>	CIRCUIT BOARD LD SET MTR POS INDIC
<a href="#">137d6123g1</a>	PC BOARD AMS TIME RATIO NERATION
<a href="#">193x703acg03</a>	RELAY BOARD
<a href="#">12bdd16b11a</a>	RELAY 5AMP 125-250VDC CONTROL 60HZ
<a href="#">193w-532acg04</a>	PC BOARD
<a href="#">193x546aeg01</a>	REFERENCE BOARD
<a href="#">115d2220g2</a>	PC BOARD FREQ TO VOLT CONVERTER
<a href="#">193x-245aag01</a>	MULT/DIV BOARD
<a href="#">12icw53a1a</a>	POWER DIRECTIONAL RELAY TIME DELAY 5AMP 120V
<a href="#">12stv11a1a</a>	RELAY TYPE STV STATIC OVEREXCITATION
<a href="#">193x543acg02</a>	TD RELAY BOARD
<a href="#">115d2291g2</a>	PC BOARD IV AMP
<a href="#">0621l0204-G001</a>	FIELD INTERFACE NON-PLUGGING
<a href="#">12iac51a801a</a>	OVERCURRENT RELAY TIME 05/4.0AMP 60HZ
<a href="#">12ges21a6d</a>	SYNCHRONIZING RELAY 115VAC
<a href="#">193w-526aag02</a>	PC BOARD
<a href="#">125d4322g3</a>	PC BOARD STANDBY VOLTA COMP
<a href="#">193x-527acg01</a>	INTERFACE BOARD
<a href="#">137d5158g2</a>	PC BOARD AMS MOTOR DRIVE CONTROL
<a href="#">142d7274g2</a>	PC BOARD POSITION CONTROL
<a href="#">137d6751g1</a>	PC BOARD SPFB TRFR CKT SPF CVT
<a href="#">193x-242abg02</a>	TACH MONITOR BD
<a href="#">19l840nh4</a>	CAPACITOR 900VDC 1200ARMS 6.0HZ
<a href="#">125d3607g1</a>	PC BOARD LD RT SET LIM INC

<a href="#">118d1368g1</a>	CIRCUIT BOARD GROUND DETECTION 125V
<a href="#">193x-712aeg03</a>	POWER AMP BOARD
<a href="#">117d7797g1</a>	PC BOARD
<a href="#">137d6721g1</a>	PC BOARD CV AMP
<a href="#">118d1313g1</a>	PC BOARD GROUND DETECTION 24V
<a href="#">226a1359-1</a>	SCANNER UV FLAME MAX. PREMISSIBLE CASE TEMP. 325F
<a href="#">193x475aag01</a>	PHASE LOGIC BD
<a href="#">137d5195g01</a>	PC BORAD-PA AMPLIFIER MK1 11-13W
<a href="#">12bdd15b11a</a>	RELAY TRANSFORMER DIFERENTIAL 5AMP 125-250VDC
<a href="#">12sly82a4d</a>	RELAY STATIC PHASE DISTANCE 120VAC 60HZ
<a href="#">193a9289g1</a>	COMPONENT BOARD
<a href="#">137d5145g1</a>	PC BOARD AMS SEQUENCE LOGIC
<a href="#">193x-528-Acg-01</a>	INTERFACE BOARD
<a href="#">12icw51b4a</a>	POWER RELAY 120V 5AMP
<a href="#">117d9105g1</a>	PC BOARD TBWD POSITION INDICATOR
<a href="#">193x-528-Adg01</a>	INTERFACE BOARD
<a href="#">193x-529bb-G01</a>	VALUTROL BOARD
<a href="#">193x-803beg03</a>	POWER AMP BOARD
<a href="#">193x-714aag01</a>	ISOLATOR BOARD
<a href="#">218a4291p6ra</a>	FUSE 2.75KV
<a href="#">193x541adg02</a>	MULTIPLIER BD
<a href="#">193x-532adg04</a>	FIELD CTRL BD
<a href="#">193x-725aag01</a>	GATE PULSE BD
<a href="#">193x-371ab-G01</a>	REGULATOR BOARD
<a href="#">12jbcg53k5a</a>	RELAY-PROTCTV-DEV LB 67GP-TYPE JBCG-FORMAT 0010 AT
<a href="#">193x-530bb-G01</a>	VALUTROL BOARD
<a href="#">133d6571g1</a>	PC BOARD SPEED CONTROL
<a href="#">193x-535aag01</a>	FOLLOWER BOARD
<a href="#">193x277aag02</a>	SIG LEV DET BD
<a href="#">193x481abg01</a>	METER BOARD