

Miki Pulley

Garanti: 12 ay
Bu rne ait Trkiye ii kapı teslim fiyat ve teslim sresi ieren teklifimizi almak iin info@yursat.com.tr e-posta adresine baŐvuru yapabilir ya da ayrıntılı bilgi iin +90 224 240 03 04 numaralı telefonumuzdan bizlere ulaŐabilirsiniz. **Miki Pulley** Markası, tedarik sresi iin ltfen bizimle iletiŐime geiniz.

Firmamız Miki Pulley Trkiye Distribtr veya temsilcisi deĐildir. Firmamız sipariŐ durumunda, belirtilen rnlerde sadece Orjinal ve yeni rn teklifi sunmaktadır. Bu sitede gsterilen zel marka adları ve ticari markalar ilgili sahiplerinin mlkiyetindedir, talep durumunda kaldırılmaktadır.



| rn | Aıklama |
|--|----------|
| Na-10-001 | |
| Sfc | |
| Starflex Als-040-R-15b-17b | |
| Starflex Als-055-R-15b-22b | |
| Starflex Als-055-Y-15b-25b | |
| Starflex Als-055-Y-25b-25b | |
| Servoflex Sfc-055-Da2-17b-20b | |
| Servoflex Sfc-055-Da2-20b-22b | |
| Servoflex Sfc-055-Da2-20b-25b | |
| Ap10715-008 | |
| Federkraftbremse Torque: 0.62 Nm Max.speed: 6000 rpm | |

| | |
|--|---|
| BXR-035-10LE-062 24V | Cable length: 400 mm Insulation class: F (155 ° C) Diameter: 48.00 mm, height: 14.00 mm Input voltage: 24 VDC |
| BXR-050-10LE-320 24V | Spring-applied brake Torque: 3.20 Nm Max.speed: 6000 rpm Cable length: 400 mm Insulation class: B (130 ° C) Diameter: 71.00 mm, height: 19.00 mm Input voltage: 24 VDC |
| BXR-035 / 040-10LE-C14 HUB | Bore: 14.00 H7 |
| BXR-050-10LE-C20 HUB | Bore: 20.00 H7 |
| 008X-00008-SET0-V00007306 | |
| 103289500 | |
| 103611800 | |
| 103629900 | |
| 104948900 | |
| 105920100 | |
| 105941700 | |
| 110544700 | |
| 110544900 | |
| 110545000 | |
| 110545100 | |
| 110545200 | |
| 110545300 | |
| 121-25-20G | |
| 121734400 | |
| 121734800 | |
| 121923500 | |
| 122295100 | |
| 122300400 | |
| 122308500 | |
| 122647400 | |
| 123425200 | |
| 125279300 | |
| 126576300 | |
| 128395300 | |

| |
|------------------------------------|
| 2322V441 K |
| 71080100 |
| 71082200 |
| 71084200 |
| 712 A2 |
| 80337600 |
| 80343100 |
| 84839089 |
| AK-185-MA-28N |
| AL-095 XX-XX |
| AP-86-MA |
| AP-98-MA |
| BEH-20G |
| BXW-05-10 12 |
| BXW-05-10H-24V |
| CF-A-012-E-60 |
| L-070 |
| L-075 SPIDER |
| MM-12K-S-12H-12H |
| MM-16K |
| MM-20K-S-15H-15H |
| PE-216-MA-25K |
| RCVS31950 |
| SFC-010DA2 8B 8B |
| SFC-040-DA2 |
| SFC-040SA2-12B-19B |
| SFC-050DA2-17B-24B |
| SFC-050SA2-24B-24K |
| SFC-090DA2-28K-32B |
| VM.10340 |
| VM.SFC-050-DA2 |

| | |
|--|--|
| VM.SFC-060-DA2 | |
| BXR-050-10LE-320 24V | 128742000 spring-loaded brake Torque: 3.20 Nm Max. speed: 6000 rpm Cable length: 400 mm Insulation class: F (155 °C) Diameter: 71.00 mm Height: 19.00 mm Input voltage: 24 VDC |
| PSL-D-42 | |
| SFC-002DA2-3B-3B | SERVOFLEX multi-plate clutch Torque: 0.25 Nm Max. speed: 10000 rpm Diameter: 12.00mm Length: 15.70mm Fastening: clamping hub Fastening: clamping hub Bore d1: 3.00 H7 Bore d2: 3.00 H7 Material: EN AW 2011 Coating: Anodized |
| Brake BXR-050-10LE-320 | Including power supply |
| 108922900 | NSS 13.9.14 Schmidt Kupplung |
| ARM-075-5X5 | COUPLING |
| wie bild | |
| 00009853 | CF-A-028-1-S-60 |
| 128745000 | BXR-020-10LE-014 24V Spring brake Torque: 0.14 Nm Speed Max.: 6000 rpm Cable length: 400 mm Insulation class: F (155 °C) Diameter: 32.00 mm Height: 14.00 mm Input voltage: 24VDC |
| 11725 | BXR-020-10LE-C6 hub Spring brake Bore: 6.00 H7 |
| 110857200 | CPE-19-6B-6B PARAFLEX coupling Torque: 0.70 Nm Speed Max.: 6000 rpm Diameter: 19.00mm Length: 19.40mm Attachment: clamping hub Attachment: clamping hub Bore d1: 6.00 H7 Bore d2: 6.00 H7 Material: EN AW 2011 |
| SFC-040 BW18910P | |
| STARFLEX MIKIALS065 ALS-065-R-20N-20N | |
| CF-B-165 Hytre element, excluding bore | 60004 |
| 121716700 | SFC-060SA2-20B-24B SERVOFLEX multi-disk clutch Torque: 60.00 Nm Max. speed: 10000 rpm Diameter: 68.00 mm Length: 53.60 mm Fastening: clamping hub Fastening: clamping hub Bore d1: 20.00 H7 Bore d2: 24.00 H7 Material: EN AW 2011 Coating: anodized |
| 121822200 | SFC-060DA2-20B-24B SERVOFLEX multi-disk clutch Torque: 60.00 Nm Max. speed: 10000 rpm Diameter: 68.00 mm Length: 73.30 mm Fastening: clamping hub Fastening: clamping hub Bore d1: 20.00 H7 Bore d2: 24.00 H7 Material: EN AW 2011 Coating: anodized |
| SFC-040 AP17908P | |
| 546-32-34NF 24V 60DIN | (stator type: 2, armature type 4) |
| SFC-050 | |

| |
|-----------------------------------|
| Als-030-Y-8-9 |
| Als-065-B-28n-35h |
| Als-095-Y-40-45 |
| Als-065-B-20h-28h |
| Als-080-Y-35h-35h |
| Als-055-Y-16-25 |
| Als-040-Y-18-19h |
| Als-055-Y-15-25h |
| Als-055-Y-24n-28 |
| Als-065-B-28n-35 |
| Als-030-Y-12-14h |
| Als-055-R-18h-28 |
| Als-040-B-14-15 |
| Als-065-R-24h-30 |
| Als-055-B-19-28h |
| Als-040-B-16-16h |
| Als-030-R-8-11 |
| Als-065-R-24-30 |
| Als-055-B-15h-25 |
| Als-080-B-32-45h |
| Als-065-R-24n-32h |
| Als-055-Y-18h-19n |
| Als-040-B-12-15 |
| Als-040-B-16-19h |
| Als-040-B-14-20h |
| Als-040-B-14h-19h |
| Als-030-B-12h-14n |
| Als-065-Y-24h-25 |
| Als-065-R-28n-32 |
| Als-030-B-12-12h |
| |

| |
|--------------------------------------|
| Als-040-Y-12-14h |
| Als-040-B-12h-15h |
| Als-080-R-32h-42h |
| Als-040-R-16h-19n |
| Als-055-Y-24-25 |
| Als-055-Y-19n-28h |
| Als-040-B-11-14n |
| Als-055-Y-16h-24h |
| Als-095-Y-42-55 |
| Als-080-Y-30h-30h |
| Als-040-Y-14n-19 |
| Als-020-Y-6,35-9,525 |
| Als-040-B-14n-20 |
| Als-030-B-10-14 |
| Als-105-Y-38-42 |
| Als-040-B-16h-20 |
| Als-095-B-38-45 |
| Als-055-B-19n-25 |
| Als-105-Y-40-60 |
| Als-080-Y-35h-42n |
| Als-030-R-9,525-12 |
| Als-030-B-9,525-10 |
| Als-065-Y-30h-32h |
| Als-065-B-25-35 |
| Als-080-R-45-45h |
| Als-030-Y-12h-14h |
| Als-040-R-12-14n |
| Als-055-R-18-18h |
| Als-040-B-11-16 |
| Als-080-Y-38h-42h |
| Als-080-B-40-42h |

| |
|--|
| Als-080-B-35-38 |
| Als-055-Y-15-20 |
| Als-055-R-16h-18 |
| Als-080-R-38-42 |
| Als-080-B-38n-42 |
| Als-030-R-9-9 |
| Als-055-B-18-19n |
| Als-080-Y-38-45h |
| Als-055-R-19n-20 |
| Als-055-Y-15h-19h |
| Als-065-R-25h-35h |
| Als-055-R-25h-25h |
| Als-055-R-24n-25 |
| Als-105-B-50-55 |
| Als-055-R-24-24h |
| Als-055-Y-18-28h |
| Als-080-R-38h-38n |
| Als-055-Y-25-28n |
| Als-065-Y-32-32 |
| Als-080-R-35h-38h |
| Als-065-R-20h-24h |
| Als-105-B-38-50 |
| Als-030-Y-14-14 |
| Als-080-R-38n-42n |
| Als-055-Y-19-28h |
| Als-040-R-14-16 |
| 103629900 Cb Unit 125-20-12-A-11 |
| Als-040-B-14n-19n |
| Als-080-R-38-40 |
| Als-065-R-25-35 |
| |

| |
|---|
| Als-080-R-32h-45h |
| Als-065-B-20-32h |
| Als-055-R-19n-28 |
| Als-030-Y-10-14 |
| Als-055-Y-16h-24 |
| Als-065-B-20-24n |
| 540200073 Koppler Coupler Sfc-050sa2-24b-24k |
| Als-020-R-6-9 |
| Pe-216-Mat-25k Riemenantriebskupplung Mit Variabler Geschwindigkeit |
| Als-030-R-9-12h |
| Als-040-R-16-19n |
| Als-065-B-24h-25h |
| Als-065-B-24-24 |
| Als-080-B-32-40 |
| Als-080-B-38n-45h |
| Als-040-Y-12-19h |
| Als-040-Y-14h-20h |
| Als-065-R-24-24n |
| Als-080-B-32-32 |
| Als-030-B-9-14n |
| Als-080-B-40h-42n |
| Al-095 Xx-Xx Kupplung Hydraulik-Stational-095 Xx-Xx |
| Als-065-B-28-28h |
| Als-020-R-8-9,525 |
| Als-065-Y-20-32 |
| Als-055-R-15-28n |
| 71080100 Sprflex Al-070 (Pilot Bore)kupplung Mit 2 Al- Hubs Und Einem Element |
| Als-080-B-42-45 |
| Als-040-R-14h-19h |

| |
|---------------------------------------|
| Als-080-B-30h-32 |
| Als-030-R-9,525-9,525 |
| Als-095-R-42-42 |
| Als-040-Y-12-15 |
| Als-055-Y-24h-25h |
| Als-065-R-20-30h |
| Als-030-R-9,525-14 |
| Als-055-B-24-28 |
| Als-065-R-20h-32h |
| Als-080-R-35-38n |
| Als-020-R-5-9,525 |
| Als-040-R-16h-16h |
| Als-055-Y-19n-28 |
| Als-040-Y-14-15h |
| Als-065-R-24-28h |
| Als-065-Y-24h-28n |
| Als-080-R-32h-42 |
| Als-065-Y-35-35 |
| Als-105-B-60-60 |
| Als-040-R-14h-16h |
| Als-055-B-16-28 |
| Als-055-R-15h-25 |
| Als-030-R-12-14h |
| Als-065-R-24h-35 |
| Als-040-R-16-20 |
| Als-055-B-19h-20 |
| Als-080-B-40h-45h |
| Als-055-B-15-20h |
| Als-055-B-18-19h |
| Als-080-R-40-40h |
| |

| |
|---|
| Als-040-Y-16-19n |
| Als-055-B-16-24 |
| Als-055-R-15-24n |
| Als-040-Y-16h-20 |
| Als-040-Y-19-20h |
| Als-055-Y-15-19 |
| Als-055-Y-18-25 |
| Als-040-R-14h-19 |
| Sfc-040sa2-12b-19b Clutch |
| Als-040-R-12h-18 |
| Als-080-Y-30-35 |
| Als-040-R-14n-19h |
| Als-080-Y-40-40 |
| Als-055-B-19-24 |
| Als-055-B-18h-20h |
| Als-055-R-19-25h |
| Als-080-B-45-45h |
| Als-080-Y-32-40h |
| Als-080-Y-38n-45 |
| Als-065-Y-20-35h |
| Als-055-R-18h-19n |
| Als-030-Y-8-9,525 |
| Als-065-Y-25-25 |
| Als-080-B-32-38h |
| Als-065-R-20h-28h |
| Als-065-R-24-24h |
| Als-040-R-11-14h |
| Als-065-R-20h-28 |
| Als-065-R-30h-35 |
| Als-040-R-20h-20h |
| Als-055-Y-18h-20h |

| |
|--|
| Als-095-Y-45-45 |
| Als-080-R-30h-32h |
| Als-105-B-55-60 |
| Als-040-R-15h-20h |
| Als-080-R-30-32h |
| Als-040-B-18-18h |
| Als-055-Y-24h-25 |
| Als-095-Y-40-50 |
| Als-065-Y-28h-28n |
| Als-040-Y-14-16 |
| Als-040-B-12-18 |
| Als-080-R-42-45 |
| Als-080-B-35h-42 |
| Als-080-B-30-42 |
| Als-055-B-18-24 |
| Als-080-Y-30h-42n |
| Als-040-Y-15h-15h |
| Als-080-B-40-42n |
| Als-080-B-30-32h |
| Als-080-Y-38-42 |
| Als-065-Y-24-30h |
| Als-055-B-16h-18h |
| Als-055-Y-18-24n |
| 712 A2 Kupplung 05 24v 10w |
| Als-055-B-28h-28n |
| Als-080-Y-30-40h |
| Als-040-Y-11-19 |
| Als-080-Y-40-42h |
| Als-065-Y-24n-28n |
| Als-080-R-40h-40h |
| Als-065-Y-24-25h |

[Als-080-Y-35-38n](#)

[Als-080-B-30-30h](#)

[Als-040-Y-16h-19](#)

[Als-055-R-25-28h](#)

[Als-065-Y-30-35](#)

[Als-020-R-9,525-9,525](#)

[Als-040-B-12h-18h](#)

[Als-055-Y-15-28n](#)

[Als-055-Y-25h-25h](#)

[Als-065-Y-32h-35h](#)

[Als-055-B-15-15h](#)

[Als-055-Y-18h-24](#)

[Als-095-R-38-50](#)

[Als-065-B-20-28h](#)

[Als-105-Y-38-50](#)

[Als-055-B-15h-15h](#)

[Als-095-B-50-55](#)

[Als-040-Y-16h-16h](#)

[Al-095 Xx - Xx](#)

[Als-095-B-40-50](#)

[Als-055-Y-16-28n](#)

[Als-080-Y-35-35h](#)

[Als-040-R-16h-19](#)

[Als-040-Y-12h-16h](#)

[Als-040-B-20-20](#)

[Als-065-B-24n-25](#)

[Als-040-R-15-16](#)

[Als-055-B-19n-24h](#)

[Als-080-B-40h-42h](#)

[Als-055-B-19h-25](#)

| |
|---|
| Als-055-R-19-24h |
| Als-080-Y-30-35h |
| Als-065-R-20-24 |
| 125-10-12e Elektromagnetische Bremse Kupplung |
| Als-040-Y-12-12 |
| Als-080-B-38n-42h |
| - Cylindrical Steel Hub Size 12(= Cylindrical Hub Without Bore) |
| Als-080-B-42h-45h |
| Als-080-Y-32-38h |
| Als-055-Y-19-19 |
| Als-055-B-19n-24 |
| Als-055-B-16-25h |
| Als-040-R-12-19h |
| Als-040-R-11-14 |
| Als-014-Y-6,35-6,35 |
| Als-030-R-11-11 |
| Als-105-Y-50-60 |
| Als-080-B-32h-42n |
| Als-040-Y-14h-20 |
| Als-080-B-42-45h |
| Als-040-Y-11-14n |
| Als-055-B-19n-28h |
| Als-080-R-32h-35h |
| Als-055-R-18-28 |
| Als-055-R-18h-24 |
| Als-040-R-12-15 |
| Als-030-B-9.525-14h |
| Als-040-R-14n-16 |
| Als-080-B-38h-38n |
| Als-040-Y-14h-18h |

| |
|-------------------------------------|
| Als-065-Y-25-32h |
| Als-055-B-24-28n |
| Als-095-Y-38-38 |
| Als-065-R-24-28n |
| Als-040-R-20-20h |
| Als-065-R-25h-30 |
| Als-055-R-16-20 |
| Als-014-R-4-6,35 |
| Als-055-B-19h-28n |
| Als-065-Y-25h-30 |
| Als-055-Y-16-19h |
| Als-055-Y-16h-18 |
| Als-105-R-40-50 |
| Als-055-R-19h-24h |
| Als-065-R-28n-35h |
| Als-080-Y-35h-45 |
| Als-080-B-40-45 |
| Als-055-R-16h-25 |
| Als-055-R-18-28h |
| Als-040-Y-14-15 |
| Als-055-Y-24h-28 |
| Als-040-Y-16-20h |
| Als-105-B-40-40 |
| Als-095-R-55-55 |
| Als-040-B-12-19h |
| Als-040-Y-19n-20h |
| Als-080-Y-30-38 |
| Als-040-Y-14h-14n |
| Als-030-Y-9-14n |
| Als-020-Y-6,35-6,35 |
| Als-055-B-19h-24 |

| |
|-----------------------------------|
| Als-055-B-20h-20h |
| Als-065-B-24-24n |
| Als-080-R-35h-45h |
| Als-014-R-5-6 |
| Als-040-Y-11-19n |
| Als-065-B-32-32 |
| Als-055-B-24n-28h |
| Als-065-B-24-30 |
| Als-065-R-20-20 |
| Als-055-Y-16-25h |
| Als-080-Y-32h-42h |
| Als-055-R-16-28n |
| Als-080-B-35h-40 |
| Als-040-Y-20-20 |
| Als-065-Y-24n-35h |
| Als-055-B-20-20h |
| Als-040-B-18h-19n |
| Als-080-R-40h-45h |
| Als-055-R-19-25 |
| Als-065-B-30-32h |
| Als-040-B-12h-16 |
| Als-040-Y-12-16h |
| Als-105-B-55-55 |
| Als-055-R-19-28 |
| Als-055-B-20-25h |
| Als-080-R-35-45h |
| Als-040-R-14n-20 |
| Als-065-Y-20-25h |
| Als-065-B-35-35 |
| Als-014-Y-4-6 |
| |

[71082200 Kupplung Sprflex AI-095 \(Pilot](#)

[Bore\)](#)

[Als-055-Y-24-28h](#)

[Als-055-Y-19h-19h](#)

[Als-040-R-16-16h](#)

[Als-055-Y-15-19h](#)

[Sfc-050wd22b-18b](#)

[Als-040-B-18h-20](#)

[Als-065-R-20-25h](#)

[Als-080-Y-32-42](#)

[Als-055-Y-19h-28n](#)

[Als-065-R-25-28n](#)

[Als-105-R-45-60](#)

[Als-065-B-28-32](#)

[Als-065-Y-20h-25h](#)

[Als-055-B-20h-25h](#)

[Als-040-Y-14h-14h](#)

[Als-020-R-6,35-8](#)

[Als-065-Y-24-28](#)

[Als-065-R-28h-32](#)

[Als-030-Y-9-9,525](#)

[Als-065-Y-24h-25h](#)

[Als-040-B-18-18](#)

[Als-065-Y-20h-30](#)

[Als-065-Y-32h-35](#)

[Als-030-R-9-11](#)

[Als-080-Y-35-42h](#)

[Als-080-Y-30h-42h](#)

[Als-080-B-32-42n](#)

[Als-065-R-20-28](#)

[Als-065-R-24n-35](#)

[Als-055-R-15-15](#)

| |
|-------------------------------------|
| Als-014-R-3-3 |
| Als-030-Y-9.525-12h |
| Als-040-B-16h-20h |
| Als-040-R-15h-18h |
| Als-055-B-20h-28h |
| Als-080-Y-32-38n |
| Als-040-Y-14-14h |
| Als-080-R-32h-38 |
| Als-055-Y-24-28n |
| Als-040-Y-18-19 |
| Als-065-Y-25-35 |
| Als-040-B-12-20h |
| Als-055-Y-19-24n |
| Als-055-R-19-19h |
| Als-065-R-24-35h |
| Als-055-Y-24h-28n |
| Als-080-R-32h-40h |
| Als-040-R-12-18h |
| Als-065-B-24-28n |
| Als-040-Y-11-16 |
| Als-055-R-24-28h |
| Als-030-Y-8-10 |
| Als-065-B-28h-30h |
| Als-030-B-9-12h |
| Als-055-B-16h-19h |
| Als-055-B-15-24 |
| Als-095-R-40-50 |
| Als-040-R-12-16h |
| Als-055-Y-18-19h |
| Als-055-B-18h-24h |
| |

| |
|-----------------------------------|
| Als-065-B-20-30h |
| Als-040-Y-16-19h |
| Als-055-Y-16-19n |
| Als-080-B-40-40h |
| Als-080-B-42-42h |
| Als-055-Y-19n-24h |
| Als-040-Y-18h-19n |
| Als-065-Y-30-30h |
| Als-040-Y-18-18 |
| Als-055-B-24n-28 |
| Als-040-Y-16h-18h |
| Als-095-B-38-42 |
| Als-055-R-16-24h |
| Als-030-Y-10-10 |
| Als-065-B-20h-24n |
| Als-065-B-24h-35h |
| Als-055-R-15h-28 |
| Als-055-R-18-19 |
| Als-065-B-20h-25 |
| Als-055-R-16-24n |
| Als-055-Y-16-24 |
| Als-080-B-35-40h |
| Als-040-B-14h-15h |
| Als-105-Y-42-55 |
| Als-065-R-20h-30h |
| Als-040-Y-16-18 |
| Als-080-R-40h-42h |
| Als-065-Y-24n-32h |
| Als-055-R-18-20 |
| Als-055-Y-15h-19 |
| Als-080-Y-32h-45h |

| |
|-----------------------------------|
| Als-040-Y-12h-14 |
| Als-040-B-12-20 |
| Als-080-Y-35h-42h |
| Als-080-R-32-38n |
| Als-020-Y-8-9 |
| Als-080-R-32-40h |
| Als-065-Y-28-30 |
| Als-055-B-20h-28 |
| Als-055-R-19h-28n |
| Als-055-Y-16h-20h |
| Als-055-B-15-24n |
| Als-080-Y-38h-40h |
| Als-065-B-20h-25h |
| Als-065-R-25h-28h |
| Als-055-Y-19h-28 |
| Als 095-R-42h-42h |
| Als-055-B-20-24 |
| Als-105-B-38-60 |
| Als-055-B-24h-25 |
| Als-055-R-15h-28n |
| Als-030-Y-8-14h |
| Als-055-R-18h-20h |
| Als-040-Y-19h-19h |
| Als-055-R-15-15h |
| Als-080-Y-38-38h |
| Als-030-Y-14h-14h |
| Als-080-Y-32-42n |
| Als-065-B-25-25 |
| Als-040-Y-14n-19h |
| Als-030-B-9-11 |
| Als-065-R-32h-35h |

[Als-080-Y-32-35h](#)

[Als-065-B-20-28n](#)

[Als-055-R-20-20](#)

[Als-065-B-24n-24n](#)

[Als-065-R-32h-32h](#)

[Als-080-R-30-35h](#)

[Als-040-B-15-19](#)

[Als-065-Y-20-28n](#)

[Als-065-Y-32-32h](#)

[Als-040-R-11-11](#)

[Als-055-R-24-24n](#)

[Als-080-B-30h-32h](#)

[Als-080-Y-30h-35](#)

[Als-055-R-25-25h](#)

[Als-105-Y-45-60](#)

[Als-065-Y-30-30](#)

[Als-080-R-32h-32h](#)

[Als-030-Y-9,525-11](#)

[Als-040-Y-14-19](#)

[Als-080-R-38h-42h](#)

[Als-040-B-16h-16h](#)

[Als-040-B-11-19h](#)

[Als-065-Y-25-30](#)

[Als-040-Y-19-19h](#)

[Als-105-Y-42-60](#)

[Als-065-Y-20h-25](#)

[Als-040-R-12h-15h](#)

[Als-065-B-20-28](#)

[Als-040-B-19h-20h](#)

[Als-040-B-11-18](#)

| |
|-------------------------------------|
| Als-080-Y-40-40h |
| Als-055-Y-19h-20 |
| Als-055-Y-15-24h |
| Als-080-Y-38h-40 |
| Als-055-R-24-25h |
| Als-055-R-20h-28 |
| Als-055-R-19n-24h |
| Als-065-R-30h-32h |
| Als-080-Y-38-40h |
| Als-030-B-8-11 |
| Als-065-R-24h-25h |
| Als-080-R-30h-45h |
| Als-040-Y-14-20h |
| Als-040-R-16-16 |
| Als-080-R-35-42n |
| Als-040-R-18-19h |
| Als-040-R-19h-19n |
| Als-080-B-38-40h |
| Als-055-R-24h-24h |
| Als-095-R-38-55 |
| Als-105-Y-42-45 |
| Als-055-Y-15-19n |
| Als-040-B-11-20h |
| Als-105-Y-40-55 |
| Als-080-B-30-32 |
| Als-055-Y-15-15 |
| Als-080-B-38h-42h |
| Als-055-B-19n-25h |
| Als-080-Y-42h-42n |
| Als-020-R-6,35-6,35 |
| Als-080-Y-40h-45 |

| | |
|--|-------------|
| Als-080-R-38-38h | |
| Als-065-R-35-35 | |
| Als-040-B-14-19n | |
| Als-065-R-24-30h | |
| Als-055-R-19h-28h | |
| Als-040-Y-14h-18 | |
| Als-055-Y-16-19 | |
| Als-080-B-42-42 | |
| Als-040-Y-15-16 | |
| Als-065-R-24h-35h | |
| Als-040-R-18-18 | |
| Als-055-Y-15h-18 | |
| Als-055-B-15h-16 | |
| Als-030-R-10-14 | |
| Als-065-R-24-28 | |
| Als-055-B-24-25h | |
| Als-055-R-19-19 | |
| Als-080-R-32h-38h | |
| Vfd-103-B02 | 3A AC DRIVE |
| Als-055-Y-15h-28h | |
| Als-055-B-15-18h | |
| 5461534ls | SOLENOID |
| Als-080-R-42h-45 | |
| Als-040-B-19-19 | |
| Als-040-R-14h-14n | |
| Als-080-Y-38h-42 | |
| Als-065-R-32-32h | |
| Als-040-B-15h-18h | |
| Als-065-Y-20h-32h | |
| Als-105-R-38-60 | |
| 104948900 Baumann Flex Mm-16k (Pilot | |

| |
|-----------------------------------|
| Bore) |
| Als-055-R-15h-18h |
| Als-065-R-20-35h |
| Als-055-R-15h-20 |
| Als-055-B-18h-18h |
| Als-040-Y-15h-18 |
| Als-040-B-16h-19 |
| Als-065-Y-20h-24 |
| Als-040-Y-14n-16h |
| Als-055-Y-15h-24h |
| Als-020-Y-6-9,525 |
| Als-055-B-24h-24n |
| Als-065-Y-20h-30h |
| Als-040-Y-12-20 |
| Als-040-B-15h-15h |
| Als-065-Y-28-28h |
| Als-065-Y-20-24h |
| Als-055-R-18h-28n |
| Als-014-Y-4-4 |
| Als-105-B-40-45 |
| Als-040-B-16-20h |
| Als-040-Y-14h-19n |
| Als-030-Y-10-14h |
| Als-065-B-25-28 |
| Als-040-Y-12-16 |
| Als-080-B-35h-38n |
| Als-065-B-20-24 |
| Als-065-B-30-30h |
| Als-040-R-12h-14n |
| Als-065-R-20-24n |
| Als-055-R-19h-25 |

| |
|---|
| Als-055-Y-18-24 |
| Als-065-B-25h-32 |
| Als-065-Y-20-30h |
| Als-065-Y-24-30 |
| Als-055-R-24h-28h |
| Als-055-R-15h-20h |
| Als-030-R-9-14 |
| Als-065-R-30h-35h |
| Als-055-Y-16h-16h |
| Als-080-Y-35-42n |
| Als-080-Y-42-42 |
| Als-065-B-20h-28 |
| Als-080-R-30-45h |
| Als-065-R-20-20h |
| Als-040-Y-15h-16 |
| Als-055-Y-16-28 |
| Als-055-B-18-20 |
| Als-065-Y-25h-35h |
| Vm.Sfc-060-Da2 Servoflex Sfc-060-Da2-? B-?B |
| Als-055-R-18h-19h |
| Als-055-Y-24h-28h |
| Al-95 |
| Als-055-R-28h-28n |
| Als-040-R-12-19n |
| Als-055-B-16h-28h |
| Als-065-Y-20-28h |
| Als-020-R-6,35-9 |
| Als-030-Y-14h-14n |
| Als-095-B-42-55 |
| Als-055-R-25-28 |

| |
|--|
| Als-040-Y-14h-19 |
| Als-095-B-38-40 |
| Als-065-R-28-30h |
| Als-065-R-24-25 |
| Als-055-Y-18h-28n |
| Als-055-B-19-19h |
| Als-055-R-19-20h |
| Als-055-B-19h-28h |
| Als-065-Y-28-35h |
| Als-080-B-32h-45 |
| Als-030-B-8-8 |
| Als-055-R-15-16h |
| Als-040-B-11-19 |
| Als-095-B-45-50 |
| Als-055-R-16-28h |
| Als-105-B-42-45 |
| Als-040-Y-12h-18 |
| Als-080-B-30h-35 |
| Als-040-B-18-19 |
| Als-080-Y-38-42n |
| Als-055-Y-19h-24n |
| Als-065-B-20-20h |
| Als-030-Y-8-14 |
| 1922v298 -30 Variable Riemen |
| Als-040-R-16-20h |
| Als-055-B-15-16 |
| Als-080-Y-30h-45h |
| Als-055-Y-18-18 |
| Als-080-B-30h-45h |
| Als-040-Y-14-18 |
| Als-065-B-25-28h |

| |
|------------------------------------|
| Als-065-B-30h-32 |
| Als-055-R-19h-19n |
| Als-040-B-14h-20 |
| Als-040-Y-14n-20 |
| Als-065-B-30h-30h |
| Als-040-B-15h-20h |
| Als-065-R-24h-28h |
| Als-065-B-20h-32 |
| Als-065-R-25-28h |
| Als-055-R-16h-25h |
| Als-055-R-19h-28 |
| Als-020-R-5-6,35 |
| Als-040-Y-14-18h |
| Als-095-Y-45-50 |
| Als-030-R-12-12h |
| Als-065-Y-20h-28n |
| Als-040-Y-11-18h |
| Als-055-Y-28n-28n |
| Als-055-R-15-24 |
| Als-065-Y-24h-30h |
| Als-055-B-15-20 |
| Sfc-050sa2-12b-14b |
| Als-055-Y-16-20 |
| Als-065-Y-24h-35 |
| Als-040-Y-14-20 |
| Als-040-B-11-14h |
| Als-030-B-8-14 |
| Als-055-B-16-24h |
| Als-065-B-25h-25h |
| Als-055-R-20h-24 |
| Als-055-B-15h-28n |

| |
|--|
| Als-065-R-28h-28h |
| Als-105-R-42-55 |
| Als-095-R-45-50 |
| Als-065-R-28h-30 |
| Als-080-B-32h-35 |
| Als-080-B-30-42h |
| Als-055-B-18-20h |
| Als-040-B-14h-19n |
| Als-080-Y-30-42h |
| Als-065-R-24-35 |
| Als-065-B-24n-32 |
| Als-030-B-11-12 |
| Als-040-Y-19n-20 |
| Als-065-Y-24-24n |
| Als-040-Y-18-19n |
| Sfc-050 Da Flexible Kupplung |
| Als-065-Y-28h-32 |
| Als-040-R-12-16 |
| Als-055-Y-19-24h |
| Als-055-B-16-19 |
| Als-030-Y-8-14n |
| Als-030-B-9.525-14n |
| Als-055-Y-19n-19n |
| Spider L-075 Elastic Insertion |
| Als-105-B-42-60 |
| Als-080-B-45-45 |
| Als-105-R-38-38 |
| Als-055-Y-15h-28 |
| Als-055-B-24n-24n |
| Als-055-R-19h-20 |
| |

| |
|---------------------------------------|
| Als-065-B-28h-35 |
| Als-080-B-32h-40 |
| Als-080-Y-38-38 |
| Als-080-R-35h-35h |
| Als-055-B-15h-24 |
| Als-055-R-15h-19 |
| Als-055-Y-16h-18h |
| Als-055-B-16h-16h |
| Als-040-B-15-16h |
| Als-055-B-16-18 |
| Als-040-R-14-19 |
| Als-030-R-8-14n |
| Als-065-R-28n-30 |
| Als-055-R-24h-28 |
| Als-065-Y-25h-28 |
| Als-040-B-11-20 |
| Als-055-B-18h-25h |
| Als-040-R-12h-19n |
| Als-040-Y-12-20h |
| Als-030-B-11-14 |
| Als-080-B-35h-42h |
| Als-105-Y-55-55 |
| Als-055-B-18-24n |
| Als-030-B-9,525-9,525 |
| Als-040-B-14h-20h |
| Als-065-Y-25-28h |
| Als-055-B-19h-24h |
| Als-095-R-40-45 |
| Als-040-B-19-20h |
| Als-055-Y-15-24n |
| Als-030-Y-11-12h |

| |
|-----------------------------------|
| Als-040-Y-15h-18h |
| Als-080-B-35-42h |
| Als-055-Y-15h-16h |
| Als-014-R-4-4 |
| Als-055-Y-15h-24 |
| Als-065-R-32-35h |
| Als-065-Y-25-30h |
| Als-055-Y-20-28h |
| Als-020-Y-6,35-9 |
| Als-055-R-15-19n |
| Als-030-B-8-12h |
| Als-095-R-38-42 |
| Als-055-B-18h-20 |
| Als-055-R-25h-28 |
| Als-080-Y-32-40 |
| Als-065-Y-24-32h |
| Als-065-Y-32h-32h |
| Als-030-B-12-14 |
| Als-080-R-35-42 |
| Als-095-Y-50-55 |
| Als-030-B-11-12h |
| Als-040-Y-19h-20h |
| Als-080-R-35-45 |
| Als-040-B-12-18h |
| Als-065-Y-20-30 |
| Als-055-R-19h-20h |
| Als-040-B-14-16 |
| Als-040-R-14n-20h |
| Als-030-Y-9-12 |
| Als-065-B-24-32h |
| Als-055-B-18h-19n |

| | |
|------------------------------------|-------|
| Als-055-B-18h-28n | |
| Als-014-R-5-5 | |
| Als-030-R-14h-14n | |
| Als-055-Y-28-28n | |
| Als-030-Y-14-14n | |
| Als-080-Y-30-40 | |
| Als-080-B-35-35h | |
| Als-080-Y-42-42n | |
| Als-030-B-14h-14n | |
| Als-095-Y-40-55 | |
| Als-055-B-16-18h | |
| Als-040-Y-15-18h | |
| Als-055-B-18h-24 | |
| Als-080-R-30h-42n | |
| Als-080-R-38h-38h | |
| Als-080-R-40-42n | |
| Als-095-R-40-40 | |
| Als-030-B-8-9,525 | |
| Als-105-R-38-50 | |
| Als-014-Y-3-6,35 | |
| Als-105-B-45-60 | |
| Als-080-Y-40h-42n | |
| Als-065-R-32-35 | |
| Als-080-B-38-42n | |
| Als-055-R-19n-24n | |
| Beh-20g Controller | |
| Als-095-R-38-38 | |
| Als-040-B-12-16h | |
| Sc2200 | MOTOR |
| Als-065-B-24n-28 | |

| |
|------------------------------------|
| Als-065-R-25-28 |
| Als-065-Y-20-20h |
| Als-080-R-35h-42h |
| Als-040-B-14-20 |
| Als-080-R-30-30 |
| Als-065-Y-24h-28h |
| Als-080-Y-38h-45h |
| Als-030-B-14-14h |
| Als-055-R-20-24 |
| Als-055-R-25-28n |
| Als-055-B-20h-28n |
| Als-030-B-11-11 |
| Als-055-R-15-25 |
| Als-055-R-24h-25h |
| Als-030-Y-9,525-14 |
| Als-080-R-35h-38 |
| Als-055-Y-15h-24n |
| Als-020-R-6-6 |
| Als-055-B-18-28 |
| Als-065-Y-24h-30 |
| Als-065-R-25h-25h |
| Als-040-Y-15-19n |
| Als-055-Y-19n-28n |
| Als-055-B-25h-28 |
| Als-030-R-12-14 |
| Als-080-B-40-40 |
| Als-080-R-40h-42 |
| Als-030-R-8-9 |
| Als-040-Y-14-19h |
| Als-055-B-25h-28h |
| Als-040-Y-14n-15h |

| |
|---|
| Als-105-R-40-60 |
| Als-065-R-25h-32h |
| Als-055-Y-16h-25 |
| Als-040-R-14n-14n |
| Als-055-Y-18h-25h |
| Als-080-R-42h-45h |
| Als-080-Y-38n-40 |
| Als-040-R-14-20 |
| Als-055-B-25-28n |
| Als-055-Y-20h-25 |
| Als-030-B-10-11 |
| Als-065-R-24h-25 |
| Als-055-B-20-20 |
| Als-080-B-42h-42n |
| Als-040-B-18h-19 |
| Als-080-R-30-38n |
| Als-065-R-24n-28 |
| Als-055-B-24-25 |
| Als-080-B-35h-35h |
| Als-040-R-14-15h |
| Als-040-Y-16-16h |
| Als-065-B-30h-35h |
| Als-055-R-16h-19n |
| Als-065-B-28h-35h |
| Als-055-R-19h-25h |
| Als-030-Y-10-12h |
| 103629900 Elektromagnetkupplungcb Unit 125-20-12-A-11 |
| Als-040-R-14-20h |
| Als-065-B-24-25h |
| Als-040-B-18-19n |

| |
|------------------------------------|
| Als-105-R-38-40 |
| Als-030-R-10-12h |
| Als-040-Y-18h-20h |
| Als-080-Y-30h-40 |
| Als-080-Y-40-45 |
| Als-065-R-24n-25h |
| Als-055-B-19-24h |
| Sfc-060-Da2 |
| Als-065-R-28h-30h |
| Als-030-R-9,525-11 |
| Als-080-R-35-42h |
| Als-040-Y-12h-20 |
| Als-040-R-12h-20h |
| Als-065-Y-30h-30h |
| Als-080-R-30h-45 |
| Als-080-R-30-38h |
| Als-055-B-16h-25 |
| Als-105-R-42-60 |
| Als-040-B-19h-20 |
| Als-030-R-12-14n |
| Als-095-R-40-42 |
| Als-055-Y-24-28 |
| Als-080-R-30-42 |
| Als-040-Y-11-12 |
| Als-055-Y-28h-28n |
| Als-080-B-30h-45 |
| Als-105-B-42-55 |
| Als-065-Y-28n-32h |
| Als-040-B-19n-20h |
| Als-055-Y-16-16 |
| Als-055-B-15-15 |

| |
|--|
| Als-065-R-28-35h |
| Als-065-Y-20-20 |
| Als-055-Y-15-18h |
| Als-095-B-38-50 |
| Als-065-B-24n-30h |
| Als-065-B-24-35 |
| Als-055-B-18-18 |
| Als-065-Y-20h-24n |
| Als-055-Y-15-18 |
| Als-065-Y-24n-32 |
| Als-080-B-32-40h |
| Als-080-B-38-42 |
| Als-055-R-15-20h |
| Als-065-Y-28n-35h |
| Als-055-B-16h-28n |
| Als-065-R-25-25h |
| 540200094 Koppler Coupler Sfc-090da2-28k-32b |
| Als-030-R-14-14h |
| Als-030-R-9-10 |
| Als-055-Y-19-19n |
| Als-055-R-24h-24n |
| Als-055-Y-25-28 |
| Als-055-B-19-28 |
| Als-055-R-18h-19 |
| Als-040-R-14-15 |
| Als-040-B-14h-18 |
| Als-065-R-32-32 |
| Als-080-Y-42-45h |
| Als-055-Y-19n-20 |
| Als-030-B-9-14 |

| |
|-----------------------------------|
| Als-080-R-38n-40h |
| Als-080-Y-30-42n |
| Als-095-B-38-55 |
| Als-040-B-12-12 |
| Als-014-Y-6-6,35 |
| Als-080-R-38-45h |
| Als-080-B-32h-35h |
| Als-080-R-38-42h |
| Als-080-R-38n-38n |
| Als-065-R-28-32 |
| Als-080-B-30h-38h |
| Als-040-R-15-18 |
| Als-020-R-5-6 |
| Als-040-B-15h-18 |
| Als-065-Y-24n-24n |
| Als-065-B-20h-24h |
| Als-040-Y-19h-19n |
| Als-040-B-12h-12h |
| Als-040-B-15-16 |
| Als-080-B-38h-42 |
| Als-065-B-25h-32h |
| Als-055-B-16h-18 |
| Als-040-B-12h-14 |
| Als-065-R-28n-32h |
| Als-065-R-28-28h |
| Als-080-Y-32h-40 |
| Als-065-B-25h-30h |
| Als-055-B-16-25 |
| Als-080-Y-38-38n |
| Als-040-R-12h-19 |
| Als-080-Y-35h-40 |

| | |
|--------------------------------------|--------------------|
| Als-080-R-32-42h | |
| Als-055-Y-15-16h | |
| Sfc-040-Da2-15b-19b | Servoflex VM.10183 |
| Als-055-B-19n-24n | |
| Als-040-Y-15h-19 | |
| Als-040-Y-12h-19 | |
| Als-065-B-25h-30 | |
| Als-055-B-20-24n | |
| Als-055-R-24h-25 | |
| Als-020-R-6,35-9,525 | |
| Als-055-Y-18-25h | |
| Als-080-R-35-40 | |
| Als-040-Y-15-15h | |
| Als-055-R-20-20h | |
| Als-065-B-24h-28 | |
| Als-055-B-15-24h | |
| Als-105-B-38-45 | |
| Als-105-Y-50-55 | |
| Als-040-R-12h-14h | |
| Als-055-Y-19-19h | |
| Als-055-R-15h-24n | |
| Als-080-B-38n-42n | |
| Als-065-B-25h-28h | |
| Als-040-Y-12h-20h | |
| Als-105-R-42-50 | |
| Als-040-B-14n-18h | |
| Als-055-R-19n-24 | |
| Als-040-R-18-20h | |
| Als-080-R-40-42 | |
| Als-080-B-32-32h | |

| |
|---|
| Als-040-B-12-14h |
| Als-040-Y-20-20h |
| Als-080-R-35-35h |
| Als-055-B-18-28n |
| Als-065-R-24n-35h |
| Als-040-Y-12-15h |
| Als-065-Y-28n-28n |
| Als-080-R-32h-38n |
| Als-095-R-40-55 |
| Als-055-R-24n-28h |
| Als-055-B-24h-28 |
| Als-040-Y-14-14 |
| Als-040-B-12h-14h |
| Als-055-Y-18h-28h |
| Als-040-Y-11-15h |
| Als-080-R-35h-38n |
| Als-080-R-42-42n |
| Als-080-Y-30h-32 |
| Als-055-R-16-25 |
| Als-055-B-16h-20h |
| Als-080-Y-35h-42 |
| Als-080-R-30h-32 |
| Als-040-R-12-20h |
| Als-040-B-15-15h |
| Als-055-R-16-18 |
| 122308500 Clutch Cs-12-33g 24v 25 Jis |
| Als-080-R-42h-42h |
| Als-080-B-30-45h |
| Als-055-R-19h-24 |
| Als-065-B-28h-30 |
| Als-020-Y-5-9,525 |

| |
|-----------------------------------|
| Als-080-R-32-45h |
| Als-040-B-15-18 |
| Als-065-R-20h-32 |
| Als-055-R-15-18 |
| Als-055-Y-20h-24n |
| Als-065-Y-25h-25h |
| Als-040-B-14-16h |
| Als-065-B-20h-32h |
| Als-080-B-35-38n |
| Als-105-R-45-55 |
| Als-080-R-35h-42 |
| Als-080-R-38-40h |
| Als-080-R-30h-42h |
| Als-065-R-30-32h |
| Als-055-B-16-19n |
| Als-030-B-12h-14 |
| Als-080-B-38-38n |
| Als-040-B-12h-19h |
| Als-040-Y-12h-15h |
| Als-030-R-10-14n |
| Als-040-R-14-14h |
| Als-105-R-40-45 |
| Als-040-B-12h-20 |
| Als-055-Y-24n-24n |
| Als-040-R-12-20 |
| Als-055-Y-25-28h |
| Als-055-B-25-28 |
| Als-055-B-20-28n |
| Als-105-R-55-60 |
| Als-055-Y-19-20h |
| Als-065-R-28h-35h |

| |
|-----------------------------------|
| Als-080-R-45-45 |
| Als-055-B-15-19 |
| Als-040-R-12h-16 |
| Als-065-B-30-35 |
| Als-055-R-16h-20h |
| Als-040-B-11-19n |
| Als-065-R-25-32h |
| Als-065-B-25-25h |
| Als-080-B-30-42n |
| Als-040-Y-12h-16 |
| Als-105-R-42-42 |
| Als-095-Y-42-42 |
| Als-030-R-8-8 |
| Als-055-R-16h-18h |
| Als-080-Y-35-35 |
| Als-065-R-28-30 |
| Als-055-R-15h-24 |
| Als-080-R-42-42h |
| Als-040-R-14-19n |
| Als-055-Y-24-24 |
| Als-040-R-15h-19 |
| Als-040-R-15-15 |
| Als-055-Y-16h-19 |
| Als-080-R-35-35 |
| Als-055-R-19-24 |
| Als-055-R-20-28h |
| Als-080-Y-32h-35 |
| Als-065-R-28n-28n |
| Als-040-R-14n-15 |
| Als-080-R-38h-40 |

| |
|-------------------------------------|
| Als_080-R-42b-42b |
| Als-080-B-35h-42n |
| Als-065-B-24-24h |
| Als-080-Y-40-42 |
| Ap-98-Ma Variator |
| Als-040-Y-12-14 |
| Als-030-Y-9.525-14n |
| Als-065-Y-28-35 |
| Als-040-Y-14n-14n |
| Als-055-B-16-28n |
| Als-040-Y-19-19n |
| Als-080-B-32h-38h |
| Als-040-R-14n-18 |
| Als-065-R-24n-28n |
| Als-055-R-16h-20 |
| Als-065-B-28n-30h |
| Als-105-R-45-50 |
| Als-055-B-15h-18h |
| Als-040-B-15-15 |
| Ap-86-Ma Variator |
| Als-080-R-35h-45 |
| Als-105-R-50-50 |
| Als-065-B-24h-28n |
| Als-040-R-15h-18 |
| Als-080-B-32h-40h |
| Als-030-B-8-14h |
| Als-040-Y-12h-18h |
| Als-080-B-30-45 |
| Als-055-B-15-28h |
| Als-055-B-16-19h |
| Als-055-Y-20-24n |

| |
|-------------------------------------|
| Als-030-Y-9-11 |
| Als-030-Y-9.525-14h |
| Als-065-Y-32-35h |
| Als-055-R-15h-16h |
| Als-030-R-12h-12h |
| Als-065-R-20h-25h |
| Als-040-R-19n-19n |
| Als-065-Y-24h-24h |
| Als-080-Y-38h-38h |
| Als-030-R-11-12h |
| Als-014-Y-3-4 |
| Als-080-R-30-45 |
| Als-055-Y-25h-28h |
| Als-040-R-16-18 |
| Als-040-R-19-19h |
| Als-030-B-9-14h |
| Als-080-R-38-38n |
| Als-040-B-14-18h |
| Als-105-B-42-42 |
| Als-055-Y-24-25h |
| Als-055-Y-20-20 |
| Als-080-B-30h-42 |
| Als-065-R-25h-32 |
| Als-040-R-14-19h |
| Als-065-R-20h-35 |
| Als-055-R-24n-24n |
| Als-055-R-19-20 |
| Als-080-R-30-40h |
| Als-095-Y-40-40 |
| Als-030-B-10-12h |
| Als-055-B-19-24n |

| |
|------------------------------------|
| L-070 Rubber Cross |
| Als-055-B-20-28h |
| Als-055-B-24h-25h |
| Als-065-Y-20h-20h |
| Als-065-R-24h-30h |
| Als-055-Y-16-18 |
| Als-065-B-24h-28h |
| Als-080-R-40-42h |
| Als-040-B-15h-20 |
| Als-080-B-32-45 |
| Als-030-Y-9-14 |
| Als-080-R-38n-45 |
| Als-040-B-15h-19 |
| Als-055-Y-25h-28 |
| Als-055-B-24h-28h |
| Als-040-B-16-18 |
| Als-055-R-25-25 |
| Als-040-R-18-19 |
| Als-080-R-38h-42n |
| Als-040-R-15-20 |
| Als-065-R-20-28h |
| Als-055-Y-20-24 |
| Als-040-B-11-14 |
| Als-055-R-16-18h |
| Als-065-Y-24n-28 |
| Als-095-R-42-50 |
| Als-065-B-28-28n |
| Als-055-B-28n-28n |
| Als-080-R-38n-45h |
| Als-040-B-18-19h |

| |
|---|
| Als-055-R-19-28h |
| Als-065-R-35-35h |
| Als-040-R-12h-16h |
| Als-055-Y-18-28n |
| Als-080-B-30-40 |
| Als-080-R-35h-40h |
| Als-080-R-30h-38h |
| Als-040-Y-12-19n |
| Als-055-Y-15-28h |
| Als-040-R-18h-19h |
| Als-030-B-9-9 |
| Als-040-B-12h-18 |
| Als-095-Y-38-50 |
| Als-040-R-18-18h |
| Als-055-Y-18h-24n |
| Als-040-Y-15-19 |
| Als-040-R-15-16h |
| Als-040-R-11-15 |
| 008a-00050-Set0-V00007537 |
| Als-040-B-14h-14h |
| Als-080-Y-42h-45h |
| Als-080-R-30h-40 |
| Als-040-B-14-19h |
| Als-040-Y-15-20h |
| Als-065-B-28-35 |
| Als-040-B-14n-16h |
| Als-040-B-11-11 |
| Als-055-R-18-24 |
| Als-040-R-14-14 |
| Als-055-Y-15-20h |
| Als-065-B-20h-35h |

[Als-065-B-32h-35](#)

[Als-055-Y-20h-20h](#)

[Als-040-R-14n-18h](#)

[Als-040-R-12h-15](#)

[Als-065-Y-25h-28n](#)

[Als-055-R-19h-24n](#)

[Als-065-Y-24n-30h](#)

[Als-055-B-19h-24n](#)

[Als-065-Y-20h-35h](#)

[Als-095-Y-55-55](#)

[Als-055-B-18h-28](#)

[Als-055-R-20-25](#)

[Als-040-B-14h-15](#)

[Als-095-R-38-40](#)

[Als-065-B-32h-32h](#)

[Als-065-R-30-32](#)

[Als-080-Y-38h-38n](#)

[Als-065-Y-20h-32](#)

[Als-055-B-15-28](#)

[Als-065-R-24h-32](#)

[Als-030-Y-10-11](#)

[Als-030-Y-11-12](#)

[Als-080-Y-30-30h](#)

[Als-080-Y-30h-38h](#)

[Als-055-R-18h-25](#)

[Als-080-Y-30-32h](#)

[Als-105-Y-38-40](#)

[Als-065-B-35h-35h](#)

[Als-080-Y-38n-45h](#)

[Als-040-R-15-19h](#)

[Als-080-R-32-45](#)

| |
|------------------------------------|
| Als-030-R-9,525-10 |
| Als-040-R-16h-18 |
| Als-055-R-24n-25h |
| Als-105-Y-42-42 |
| Als-020-Y-5-6 |
| Als-055-R-16h-28 |
| Als-065-R-20-24h |
| Als-080-B-40-45h |
| Als-105-Y-38-55 |
| Als-065-Y-28h-30h |
| Als-065-B-28n-32h |
| Als-080-B-42-42n |
| Als-055-B-19-20 |
| Als-040-B-12h-20h |
| Als-080-R-45h-45h |
| Als-065-Y-28-28 |
| Als-040-R-12h-18h |
| Als-065-R-20h-24 |
| Als-055-B-15h-16h |
| Als-065-Y-28n-30 |
| Als-055-Y-16h-25h |
| Als-040-B-19h-19h |
| Als-055-R-15-28 |
| Als-014-R-3-6,35 |
| Als-065-R-25-32 |
| Als-030-R-11-14 |
| Als-055-Y-20-24h |
| Als-055-R-18-24h |
| Als-040-Y-16-16 |
| Als-040-Y-19-20 |

| | |
|--|---|
| Als-080-Y-32-38 | |
| Als-065-R-25-30h | |
| Als-055-Y-20h-24 | |
| Als-065-B-24-28h | |
| Als-055-R-24-25 | |
| Als-030-B-14-14n | |
| Als-080-B-38h-42n | |
| Als-040-Y-12h-14n | |
| Als-055-B-15h-19 | |
| Als-020-Y-6-6,35 | |
| Als-065-Y-24-32 | |
| Als-080-B-35h-45h | |
| 1441-6-6 (Hz-1002-2/5) | MIKI PULLEY-1441-6-6 (HZ-1002-2/5)-COUPL Encoder Coupling |
| Als-065-Y-25h-30h | |
| Als-080-R-35-38h | |
| Als-095-B-50-50 | |
| Als-040-R-11-18h | |
| Als-105-R-50-60 | |
| Als-055-B-15h-20 | |
| Als-080-B-38n-45 | |
| Als-055-R-18-18 | |
| Als-040-R-14h-18 | |
| Als-095-Y-38-42 | |
| Als-080-B-40-42 | |
| Als-080-B-35-42n | |
| Als-065-B-35-35h | |
| Als-020-Y-9-9,525 | |
| Als-040-R-15h-19n | |
| Als-030-R-14-14 | |
| Als-080-Y-45-45h | |
| Als-055-R-24n-28 | |

| |
|-------------------------------------|
| Als-020-R-5-8 |
| Als-030-B-12-12 |
| Sfc-040da2 Kupplung |
| Als-065-Y-25-28 |
| Als-055-B-19h-19h |
| Als-080-R-32-42 |
| Als-040-Y-15-20 |
| Als-030-B-12-14h |
| Als-080-Y-38-42h |
| Als-080-Y-30h-38n |
| Als-095-B-40-55 |
| Als-014-R-6-6 |
| Als-055-B-15-25h |
| Als-055-Y-16-24h |
| Als-055-B-25h-28n |
| Als-055-R-18h-24n |
| Als-055-Y-20h-24h |
| Als-105-R-38-45 |
| Als-055-R-16h-24n |
| Als-055-B-16h-28 |
| Als-065-R-30h-30h |
| Als-040-R-14n-19 |
| Als-055-B-28-28h |
| Als-080-Y-35h-38n |
| Als-105-Y-40-45 |
| Als-040-R-12-12 |
| Als-055-B-25h-25h |
| Als-040-Y-11-20 |
| Als-040-B-12h-19n |
| Als-040-R-12-14 |
| |

| |
|-----------------------------------|
| Als-055-R-16h-28h |
| Als-055-R-20h-28h |
| Als-065-Y-24n-25h |
| Als-040-R-18h-20 |
| Als-040-B-11-12h |
| Als-040-B-12h-16h |
| Als-065-Y-28-32h |
| Als-065-Y-28n-32 |
| Als-040-Y-14-14n |
| Als-065-R-32h-35 |
| Als-020-Y-8-9,525 |
| Als-065-R-24n-24n |
| Als-065-B-24n-30 |
| Als-040-R-18h-20h |
| Als-080-B-40h-42 |
| Als-065-R-20h-30 |
| Als-065-B-24h-32 |
| Als-055-R-28-28n |
| Als-055-B-20h-25 |
| Als-065-B-25-28n |
| Als-065-B-24-32 |
| Als-065-B-25-35h |
| Als-020-R-8-8 |
| Als-055-R-15h-28h |
| Als-040-B-14h-18h |
| Als-030-Y-8-8 |
| Als-065-Y-20h-28 |
| Als-030-R-10-11 |
| Als-065-R-20-30 |
| Als-065-Y-24-28n |
| Als-040-R-16h-19h |

| | |
|---|-----------------------|
| Als-040-B-15-20h | |
| Als-105-R-40-42 | |
| Als-040-B-16-18h | |
| Als-080-Y-30h-40h | |
| Als-040-Y-12-19 | |
| Als-040-R-19n-20h | |
| Als-040-B-16-16 | |
| Als-055-B-19h-20h | |
| Als-105-Y-40-42 | |
| Als-014-R-5-6,35 | |
| Als-055-Y-16h-19h | |
| Als-040-R-11-12h | |
| Als-055-B-25-28h | |
| Als-065-B-24n-25h | |
| Als-040-R-18h-19 | |
| Als-105-R-38-55 | |
| Als-055-R-24-24 | |
| Als-055-B-20h-24 | |
| Als-040-Y-16-18h | |
| Als-030-Y-14-14h | |
| 121734400 Cb Unit 125-08-12e (Base In Cast Version) | |
| Als-065-R-20h-25 | |
| Sfc-050-Da2-15b-24b | Servoflex SFC-050-DA2 |
| Als-065-Y-30h-35 | |
| Als-040-R-14h-16 | |
| Als-080-Y-35-40 | |
| Als-105-Y-38-38 | |
| Als-065-R-25h-30h | |
| Als-080-R-38-42n | |
| Als-055-Y-16h-28 | |

| |
|---------------------------------------|
| Als-055-B-19-19n |
| Als-020-Y-9,525-9,525 |
| Als-040-R-12h-19h |
| Als-030-Y-12h-12h |
| Als-055-Y-28-28h |
| Als-014-Y-6-6 |
| Als-065-R-28h-28n |
| Als-040-Y-18h-19h |
| Als-040-R-11-15h |
| Als-065-R-25h-28n |
| Als-040-B-14h-14n |
| Als-080-Y-32h-42 |
| Als-040-Y-11-15 |
| Als-055-R-15-20 |
| Als-014-R-6,35-6,35 |
| Als-055-Y-16h-19n |
| Als-055-R-20h-25h |
| Als-080-B-38h-45h |
| Als-065-Y-25-28n |
| Als-055-Y-19n-24 |
| Als-065-R-24-32 |
| Als-055-R-18h-20 |
| Als-095-B-40-40 |
| Als-065-B-24h-30h |
| Als-105-B-42-50 |
| Als-080-B-30h-40 |
| Als-080-B-35-45h |
| Als-065-Y-28n-30h |
| Als-040-R-18-20 |
| Als-055-R-15h-16 |
| Als-080-Y-32-35 |

| |
|-----------------------------------|
| Als-080-Y-40h-45h |
| Als-040-B-12-14 |
| Als-055-R-28-28 |
| Als-065-B-20h-30 |
| Als-065-Y-20-24n |
| Als-065-Y-20-32h |
| Als-040-Y-16-19 |
| Als-080-B-32h-32h |
| Als-055-Y-20h-25h |
| Als-040-B-15-19n |
| Als-080-R-40h-45 |
| Als-065-R-25-35h |
| Als-065-B-24-30h |
| Als-040-B-19-19h |
| Als-065-B-20h-24 |
| Als-040-B-11-15 |
| Als-055-R-20-28 |
| Als-105-B-45-50 |
| Als-080-R-30-30h |
| Als-055-R-20h-24n |
| Als-040-B-18h-19h |
| Als-014-Y-5-5 |
| Als-014-R-3-5 |
| Als-065-Y-30h-35h |
| Als-105-R-40-40 |
| Als-040-R-12-15h |
| Als-030-B-12-14n |
| Als-014-Y-4-5 |
| Als-055-Y-18-24h |
| Als-055-R-16-16h |
| Als-065-Y-24h-24n |

| |
|---|
| Als-080-R-30h-35 |
| Als-065-Y-30-32h |
| Als-055-R-16-28 |
| Als-055-Y-19-25h |
| Als-040-B-12-14n |
| Als-080-B-30h-30h |
| Als-040-B-16h-18 |
| Als-055-Y-19n-20h |
| Als-105-B-45-45 |
| Als-030-R-12-12 |
| Als-065-B-30-35h |
| Als-055-B-20-28 |
| Als-040-R-12h-14 |
| Als-065-R-30-35 |
| Als-080-Y-35-40h |
| Als-055-R-19n-20h |
| Als-040-Y-19h-20 |
| Als-055-R-15h-15h |
| Als-055-Y-20h-28n |
| Als-040-R-18h-19n |
| Als-040-B-18-20h |
| Als-065-R-20-35 |
| Als-055-Y-20-28n |
| Als-040-Y-15-15 |
| Als-065-Y-24-28h |
| Als-065-R-28-28 |
| Als-040-R-19-19n |
| 110545100 Stabilisator Sprflex Spider Black L-090/095 |
| Als-030-Y-11-11 |
| Als-055-B-15h-24n |

| |
|-----------------------------------|
| Als-030-R-8-9,525 |
| Als-080-Y-32-42h |
| Als-065-B-24h-30 |
| Als-080-Y-38-40 |
| Als-040-Y-18h-18h |
| Als-040-Y-14n-19n |
| Als-020-R-8-9 |
| Als-095-R-45-45 |
| Als-030-Y-9-12h |
| Als-095-Y-42-45 |
| Als-055-Y-16h-20 |
| Als-040-Y-16-20 |
| Als-040-B-14n-19 |
| Als-040-Y-18h-19 |
| Als-080-B-42h-45 |
| Als-040-B-14h-19 |
| Als-055-B-15h-18 |
| Als-080-B-32-42h |
| Als-040-R-11-12 |
| Als-040-B-15h-19h |
| Als-040-R-12-18 |
| Als-080-B-30-35 |
| Als-105-B-40-42 |
| Als-055-Y-18-19 |
| Als-040-Y-12-18 |
| Als-065-B-24n-28h |
| Als-095-B-38-38 |
| Als-080-B-32-42 |
| Als-065-R-24-24 |
| Als-055-B-15-18 |
| Als-030-R-14h-14h |

| |
|--|
| Als-040-R-11-14n |
| 110545000 Sprflex Spider Black L-075 |
| Als-055-R-19-24n |
| Als-040-R-12-19 |
| Als-040-Y-11-12h |
| Als-065-B-24-25 |
| Als-065-B-25-32h |
| Sfs-10s-25-25 |
| Als-040-Y-15-19h |
| Als-080-Y-42h-45 |
| Als-065-Y-24n-25 |
| Als-055-Y-15-16 |
| Als-105-Y-40-40 |
| Als-040-R-16-18h |
| Als-055-B-19n-20 |
| Als-055-B-16-16h |
| Als-065-Y-20h-35 |
| Als-040-Y-15h-20 |
| Als-040-B-11-16h |
| Als-080-Y-35h-38 |
| Als-055-Y-18-18h |
| Als-055-B-16h-20 |
| Als-040-Y-12h-12h |
| Als-030-B-8-10 |
| Als-030-Y-12-12h |
| Als-055-Y-18h-20 |
| Als-040-R-15h-20 |
| Als-080-Y-35-45 |
| Als-030-R-12h-14n |
| Als-080-B-30h-38n |
| |

| |
|--|
| Als-055-B-15h-19n |
| Als-055-R-19h-19h |
| 125-20-12-A-11 |
| Als-055-B-18-25 |
| Als-080-R-35-40h |
| Als-065-B-28-35h |
| Als-065-B-25h-28n |
| 126576300 Servoflex Sff-090ss - 28b - 28b-250n |
| Als-055-R-16h-24h |
| Als-040-B-15h-19n |
| Als-065-B-24h-24n |
| Als-080-B-38-45h |
| Als-040-R-15-19n |
| Als-065-B-28-30 |
| Als-020-Y-6-9 |
| Als-080-B-42h-42h |
| Als-105-B-38-38 |
| Als-055-Y-25-25h |
| Als-040-R-19-20 |
| Als-030-Y-9-14h |
| Als-040-R-16h-20 |
| Als-055-Y-19h-24 |
| Als-065-Y-24n-28h |
| Als-080-B-30-38 |
| Als-080-Y-32-45 |
| Als-065-B-25h-35h |
| Als-055-R-16h-19h |
| Als-030-B-14-14 |
| Als-030-R-9-9,525 |
| Als-030-Y-12h-14n |
| Als-030-Y-9,525-10 |

| | |
|--|--|
| 008a-00090-Set0-V00007254 | Spare parts kit CENTAFLEX-A-coupling size 090 Rubber hardness: 50 shore NR 1 rubber element included 6 x screw ISO4762 20X065 10.9-IP 3 x clamping pin DIN7346 08X10 |
| Als-065-B-24n-28n | |
| Als-055-Y-15h-25 | |
| Als-065-B-20-35h | |
| Als-040-B-16-19 | |
| Als-080-Y-32h-38 | |
| Als-065-Y-25h-28h | |
| Als-040-R-14h-15 | |
| Als-014-Y-3-6 | |
| Als-080-R-35-38 | |
| Als-040-R-14h-20 | |
| Als-080-Y-35h-45h | |
| Ap17919-003 Elektromagnetische Bremse Kupplung Type 125-10-12e Mfg | |
| 111-12-11g 24 V 25din Elektromagnetische Bremse | |
| Als-030-R-9-14h | |
| Als-095-Y-42-50 | |
| Als-055-B-18h-19h | |
| Als-030-R-12h-14h | |
| Als-080-R-30h-40h | |
| Als-105-B-45-55 | |
| Als-105-Y-60-60 | |
| Als-055-R-15-19 | |
| Als-080-R-38n-40 | |
| Als-040-B-14n-20h | |
| Als-040-R-14n-16h | |
| Als-020-Y-5-9 | |
| Als-065-Y-28h-32h | |
| Als-065-B-24h-24h | |

| |
|--|
| Als-040-Y-16h-20h |
| Als-055-R-16-19h |
| Als-080-R-40h-42n |
| Als-030-Y-10-14n |
| Als-055-R-15h-18 |
| Als-055-Y-20-28 |
| Als-065-R-20h-20h |
| Als-065-B-28h-32 |
| Als-030-B-8-9 |
| Als-055-Y-16h-24n |
| Als-055-Y-25h-28n |
| Als-095-Y-50-50 |
| Als-065-Y-30-32 |
| Als-040-Y-11-20h |
| Als-055-Y-20h-28 |
| Als-080-B-38h-40 |
| Als-080-R-30-35 |
| Als-040-B-19n-19n |
| Als-080-R-38h-42 |
| Als-095-R-38-45 |
| Als-095-Y-38-55 |
| Als-040-R-12h-12h |
| Als-040-R-14-18 |
| Als-080-B-40h-40h |
| Als-065-R-25-25 |
| Als-065-B-25h-35 |
| Als-040-B-18h-20h |
| Als-105-B-38-42 |
| Als-020-R-9-9 |
| Als-040-B-18-20 |
| 125279300 Controller Beh-20g |

| |
|--|
| 122300400 Elektromagnetische Bremsen |
| Als-040-Y-14n-18 |
| Als-040-R-19-20h |
| Als-080-B-30-30 |
| Als-065-Y-24h-35h |
| Als-040-B-14n-19h |
| Als-105-R-42-45 |
| Als-055-B-24n-28n |
| Als-095-B-40-45 |
| Als-055-R-19n-25 |
| Als-080-Y-45h-45h |
| Als-080-Y-42-42h |
| Als-030-B-11-14n |
| Als-055-B-28h-28h |
| Als-080-R-38h-45h |
| Als-055-B-18h-28h |
| Als-055-R-20h-28n |
| Als-065-Y-28h-28h |
| Als-030-R-9-12 |
| Als-080-Y-30-45 |
| Als-040-Y-12-14n |
| Als-014-R-3-4 |
| Als-040-R-11-20 |
| Als-040-R-15-19 |
| Als-105-R-38-42 |
| Als-055-R-18h-28h |
| Als-040-B-19-20 |
| Als-055-R-18-20h |
| Als-080-B-35-38h |
| Als-080-B-32h-38n |
| Als-040-B-12-12h |

| |
|--|
| Als-080-B-30h-42n |
| Als-030-Y-8-11 |
| Als-065-B-28-30h |
| Als-055-B-24n-25h |
| Als-080-B-30-38n |
| Als-030-Y-9,525-9,525 |
| Als-055-B-16-20h |
| Als-080-Y-30-38h |
| Als-055-Y-16-28h |
| Als-080-R-38n-42h |
| Als-055-B-18h-19 |
| Als-080-Y-35-38h |
| Als-055-Y-16-18h |
| Als-080-Y-38n-42 |
| Als-020-Y-5-6,35 |
| Als-065-B-25h-28 |
| Als-040-R-11-19h |
| Als-030-B-10-14h |
| Als-030-R-12h-14 |
| Als-080-R-42h-42n |
| Als-080-B-32-38 |
| Als-055-B-24h-28n |
| Als-065-R-20h-28n |
| Als-040-B-11-15h |
| Als-105-R-40-55 |
| Als-020-Y-9-9 |
| Als-080-R-42b-42b |
| 103611800 Cb Unit 121-25-20-A-13 |
| Als-030-B-10-10 |
| Als-065-R-20h-24n |

| |
|-----------------------------------|
| Als-055-B-19n-20h |
| Als-055-B-28-28n |
| Als-065-B-20-30 |
| Als-055-B-20h-24h |
| Als-105-Y-38-60 |
| Als-055-Y-18h-24h |
| Als-040-Y-18-20 |
| Als-065-R-28n-35 |
| Als-065-B-24-28 |
| Als-030-R-10-12 |
| Als-080-B-38h-38h |
| Als-020-R-9-9,525 |
| Als-030-Y-12-14 |
| Als-080-Y-40h-42h |
| Als-040-Y-16h-18 |
| Als-080-B-35h-45 |
| Als-065-B-24n-35h |
| Als-055-B-19-19 |
| Als-080-R-35h-40 |
| Als-080-Y-32h-32h |
| Als-040-R-14h-19n |
| Als-055-Y-24-24n |
| Als-030-R-10-14h |
| Als-080-B-35h-40h |
| Als-030-Y-12-14n |
| Als-080-B-38n-38n |
| Als-040-B-14n-16 |
| Als-055-R-20h-25 |
| Als-055-Y-19-20 |
| Als-055-R-20-24h |
| Als-080-B-30-38h |

| |
|--|
| Als-055-B-25-25 |
| Als-065-B-25-32 |
| Als-055-Y-24h-24n |
| 80343100 Belt 2322v441k |
| Als-040-R-11-18 |
| 110544900 Sprflex Spider Black L-070flexibles Stereement |
| Als-065-Y-20h-28h |
| Als-065-R-20-32h |
| Als-030-B-9-10 |
| Als-055-Y-19h-28h |
| Als-055-B-16h-25h |
| Als-040-R-18h-18h |
| Als-055-B-19h-28 |
| Als-080-B-35-35 |
| Als-080-B-32h-42 |
| Als-040-Y-14n-15 |
| Als-065-R-20-28n |
| Als-030-R-14-14n |
| 110544700 Sprflex Spider Black L-035 |
| Als-065-B-24n-35 |
| Als-055-R-19n-28h |
| Als-040-R-11-20h |
| Als-020-R-6-9,525 |
| Als-055-Y-16h-28h |
| Als-055-B-19-25h |
| Als-105-Y-50-50 |
| Als-080-Y-32h-40h |
| Als-040-B-20h-20h |
| Als-095-Y-40-42 |
| Als-065-R-28h-35 |

| |
|--|
| Als-055-Y-19h-25 |
| Als-080-R-38h-40h |
| Als-040-R-11-19 |
| Als-055-Y-15-25 |
| Als-055-R-15h-25h |
| Als-030-R-9-14n |
| Als-105-Y-45-45 |
| Als-040-B-12-19 |
| Als-080-B-38-45 |
| Als-080-R-32-32h |
| Als-055-Y-15h-19n |
| Als-065-R-25h-35 |
| Als-030-R-11-12 |
| Als-095-B-45-45 |
| Als-065-Y-24h-32h |
| Als-040-R-16h-20h |
| Als-055-Y-15h-18h |
| Als-055-R-20h-24h |
| Als-080-Y-40-42n |
| Als-065-R-24n-30h |
| Als-095-B-45-55 |
| Pe-216-Ma-25k Das Angetriebene Teil Der Variomatik |
| Als-055-Y-25-25 |
| Als-080-Y-30h-45 |
| Als-040-R-12h-20 |
| Als-040-B-14n-14n |
| Als-030-Y-12-12 |
| Als-105-B-40-60 |
| Als-065-Y-28h-35 |
| Als-095-R-45-55 |
| |

| |
|---|
| Als-055-B-24-28h |
| Als-030-Y-11-14 |
| Als-105-R-50-55 |
| Als-055-B-16h-24 |
| L-075 Spider Flexible Element |
| Als-020-Y-8-8 |
| Als-105-Y-40-50 |
| Als-040-Y-11-18 |
| Als-065-B-20-24h |
| Als-040-Y-14-19n |
| Als-040-B-14h-16 |
| Als-080-Y-32h-38n |
| Als-080-B-38h-45 |
| Als-080-B-38n-40 |
| Als-040-Y-18h-20 |
| Als-020-Y-5-8 |
| Als-055-R-28h-28h |
| Als-040-Y-12h-19h |
| Als-040-Y-18-20h |
| Als-065-Y-24n-30 |
| Als-055-Y-28h-28h |
| Als-080-R-32-38h |
| Als-030-Y-10-12 |
| Als-030-B-10-14n |
| Als-055-Y-24-24h |
| Als-080-R-30-42n |
| Als-065-R-24n-25 |
| Als-030-B-8-12 |
| Als-055-R-19-28n |
| Als-065-Y-28n-35 |
| Als-055-R-16h-16h |

| |
|---|
| Als-040-Y-14n-20h |
| Als-040-R-14-18h |
| Als-065-Y-20-28 |
| 121734800 Cb Unit 125-10-12e (Base In Cast Version) |
| Als-080-R-32h-40 |
| Als-055-B-18h-24n |
| Als-065-R-30-35h |
| Als-040-R-14h-14h |
| Als-095-Y-45-55 |
| Als-040-R-19h-19h |
| Als-040-B-19h-19n |
| Als-055-Y-18-19n |
| Als-040-Y-19-19 |
| Als-055-Y-19h-20h |
| Als-055-Y-19h-19n |
| Als-030-B-10-12 |
| Als-065-Y-30-35h |
| Als-065-B-28n-30 |
| Als-095-B-40-42 |
| Als-080-Y-35-42 |
| Als-040-Y-14-16h |
| Als-040-R-14h-15h |
| Als-030-R-8-12 |
| Als-055-Y-24n-28h |
| Als-080-R-30h-35h |
| Als-030-B-9.525-12h |
| Als-080-R-40-45 |
| Als-040-R-15-20h |
| Als-055-B-16-28h |
| Als-080-B-40h-45 |

| |
|--|
| Als-030-B-9,525-11 |
| Als-040-B-11-18h |
| Als-065-R-24n-30 |
| Als-095-R-42-55 |
| Als-065-Y-28h-35h |
| Als-040-B-12h-19 |
| Als-105-B-40-55 |
| Als-055-Y-15-15h |
| Als-080-R-40-45h |
| Als-080-B-32h-42h |
| Als-065-R-24h-24n |
| Als-080-R-32-35h |
| Als-040-B-16-20 |
| Als-065-B-20h-35 |
| Als-065-R-24h-28n |
| Als-065-B-32-35h |
| Als-080-Y-30-38n |
| Als-055-B-16-16 |
| Als-065-B-28h-28h |
| Als-080-Y-42h-42h |
| Als-095-R-50-55 |
| Als-040-Y-19n-19n |
| Als-040-R-15h-16h |
| Als-055-Y-15h-16 |
| 110545100 Sprflex Spider Black L-090/095 |
| Als-040-B-15-19h |
| Als-020-R-6-8 |
| Als-040-R-14-14n |
| Als-040-B-12h-14n |
| Als-055-Y-19n-25 |

[Als-105-R-60-60](#)

[Als-055-B-20-25](#)

[Als-055-Y-15h-28n](#)

[Als-040-Y-16h-19n](#)

[Als-080-Y-40h-40h](#)

[Als-055-B-24-24h](#)

[Als-030-R-10-10](#)

[Als-030-R-9.525-14h](#)

[Als-040-R-11-16](#)

[Als-055-R-19n-19n](#)

[Als-065-B-32-32h](#)

[Als-055-Y-18h-18h](#)

[Als-040-R-16-19h](#)

[Als-080-R-30h-38](#)

[Als-095-R-42-45](#)

[Als-065-R-30-30h](#)

[Als-065-R-20-32](#)

[Als-080-B-38-40](#)

[Als-055-Y-15h-15h](#)

[Als-055-B-15h-19h](#)

[Als-055-B-18-28h](#)

[Als-065-Y-24-24h](#)

[Als-055-B-15h-25h](#)

[Als-055-Y-18h-19](#)

[Als-055-Y-15-28](#)

[Als-040-B-19n-20](#)

[Als-065-R-25h-28](#)

[Als-055-Y-20-25h](#)

[Als-055-R-15-19h](#)

[Als-055-B-18-25h](#)

| |
|-------------------------------------|
| Als-065-R-30-30 |
| Als-065-B-20h-30h |
| Als-030-R-9.525-14n |
| Als-080-R-40-40 |
| Als-040-Y-12h-14h |
| Als-055-R-19n-28n |
| Als-055-R-15h-19h |
| Als-080-Y-30-30 |
| Als-065-B-32-35 |
| Als-040-Y-12h-15 |
| Als-055-B-16h-19 |
| Als-065-Y-25-25h |
| Als-065-Y-24-35h |
| Als-040-R-19h-20 |
| Als-065-B-24h-32h |
| Als-065-R-24n-32 |
| Als-080-R-38n-42 |
| Als-080-B-38-38 |
| Als-065-Y-24n-35 |
| Als-105-Y-45-50 |
| Als-040-B-20-20h |
| Als-055-B-19-28n |
| Als-065-Y-30h-32 |
| Als-080-R-38-38 |
| Als-065-B-28n-32 |
| Als-040-R-15-18h |
| Als-105-Y-45-55 |
| Als-040-Y-16h-19h |
| Als-080-R-32h-42n |
| Als-080-R-32h-35 |
| Als-105-B-50-50 |

| |
|--|
| Als-055-B-15-28n |
| Als-065-R-35h-35h |
| Als-080-B-38h-40h |
| Cf-A-012-E-60 Element(= Flexible Element, Size 12, 60shore Hardness, Mounting Screws Included) |
| Als-040-R-15h-19h |
| Als-080-Y-30-45h |
| Als-055-R-24n-28n |
| Als-055-R-15-28h |
| Als-040-B-12-15h |
| Als-065-Y-20-25 |
| Als-055-R-18-24n |
| Als-055-R-15-16 |
| Als-065-B-30-32 |
| Als-055-R-18-25 |
| Als-040-B-14-18 |
| Als-065-B-30h-32h |
| Als-055-B-15-16h |
| Als-080-R-30-38 |
| Als-080-Y-45-45 |
| Als-080-R-30-40 |
| Als-055-Y-19-28 |
| Als-055-Y-16-16h |
| Als-065-Y-24-24 |
| Als-055-B-15h-24h |
| Als-055-Y-18-20 |
| Als-055-B-16h-24h |
| Als-105-Y-38-45 |
| Als-040-B-19-19n |
| Als-020-Y-5-5 |
| Als-080-B-30h-38 |

| |
|-----------------------------------|
| Als-065-B-20h-20h |
| Als-040-B-14-14h |
| Als-065-R-28-35 |
| Als-095-B-42-42 |
| Als-040-Y-15h-16h |
| Als-030-R-8-12h |
| Als-040-R-12-12h |
| Als-080-Y-30-32 |
| Als-065-R-28n-30h |
| Als-065-B-20-32 |
| Als-040-Y-11-19h |
| Als-014-Y-5-6 |
| Als-055-B-19n-28n |
| Als-040-Y-12h-19n |
| Als-055-B-16-20 |
| Als-040-B-14-15h |
| Als-095-Y-38-45 |
| Als-040-B-15-18h |
| Als-080-B-30-40h |
| Als-055-Y-18h-19h |
| Als-040-B-14n-15 |
| Als-040-Y-15-18 |
| Als-055-R-16h-24 |
| Als-040-Y-15h-19h |
| Als-080-B-38-42h |
| Als-040-R-15-15h |
| Als-055-R-19-19n |
| Als-065-B-24h-35 |
| Als-040-R-16h-18h |
| Als-014-Y-3-3 |

| |
|-----------------------------------|
| Als-040-R-18-19n |
| Als-030-B-11-14h |
| Als-055-B-19-20h |
| Als-055-Y-18-28 |
| Als-040-R-19-19 |
| Als-040-Y-12-18h |
| Als-040-B-12-19n |
| Als-055-R-25h-28n |
| Als-055-Y-15h-25h |
| Als-105-Y-55-60 |
| Als-080-B-32-35h |
| Als-065-R-24n-28h |
| Als-055-R-28-28h |
| Als-055-Y-16-20h |
| Als-080-Y-30h-42 |
| Als-080-R-35h-42n |
| Als-080-R-30h-42 |
| Als-055-Y-20-20h |
| Als-055-R-18h-18h |
| Als-040-Y-12-12h |
| Als-105-B-38-55 |
| Als-040-B-12h-15 |
| Als-080-R-32-32 |
| Als-105-Y-42-50 |
| Als-080-Y-30h-38 |
| Als-055-B-24n-25 |
| Als-040-Y-14h-15h |
| Als-065-R-30h-32 |
| Als-080-R-30h-38n |
| Als-040-B-14-19 |
| Als-030-B-9-9,525 |

| |
|---|
| Als-065-B-28-28 |
| Als-065-Y-20-24 |
| Als-055-B-19-25 |
| Als-080-B-30h-42h |
| Als-080-Y-32-32 |
| Als-095-Y-38-40 |
| Als-065-Y-28h-30 |
| Als-030-R-8-14h |
| Als-065-B-20-35 |
| Als-055-Y-19h-24h |
| Als-030-R-8-10 |
| 71084200 Sprflex Al-100 (Pilot Bore) |
| Als-080-Y-40h-42 |
| Als-080-B-35-45 |
| Als-055-Y-16h-28n |
| Als-065-B-30h-35 |
| Als-055-R-16h-19 |
| Als-014-R-3-6 |
| Als-080-B-32h-45h |
| Als-080-R-30h-30h |
| Als-040-Y-14h-16h |
| Als-080-B-30h-35h |
| Als-055-R-15h-24h |
| Als-040-R-16-19 |
| Als-055-R-28n-28n |
| Als-020-Y-6,35-8 |
| Als-080-R-32-42n |
| Als-080-B-32-38n |
| Als-080-Y-38n-42h |
| Als-080-B-35-42 |
| 110544800 Coupling Part: Spider-L-050 |

| |
|---|
| Als-065-Y-25-32 |
| Als-040-B-14h-16h |
| 110545200 Sprflex Spider Black L-100 |
| Als-095-B-42-45 |
| 110545100 Kunststoff-Kupplung Plastic Lovejoy |
| Als-040-Y-15-16h |
| Als-055-B-16h-19n |
| Als-055-R-15-18h |
| Als-055-R-25h-28h |
| Als-014-Y-5-6,35 |
| Als-055-B-25-25h |
| Als-095-B-55-55 |
| Als-030-Y-11-14h |
| Als-105-B-50-60 |
| Als-040-Y-11-16h |
| 71082200 Sprflex Al-095 (Pilot Bore)cl-095 Alte Bezeichnungohne Bohrungen |
| Als-080-B-30-35h |
| Als-065-B-28h-32h |
| Als-055-R-16-25h |
| Als-055-R-15-25h |
| Als-055-B-24-24 |
| Als-020-R-6-6,35 |
| Als-065-B-24h-25 |
| Als-065-Y-25-35h |
| Als-055-Y-19n-24n |
| Als-055-Y-16-24n |
| Als-055-Y-19-25 |
| Als-040-R-15h-16 |
| Als-055-R-16-24 |
| Als-055-Y-18h-25 |

| |
|---|
| Als-030-B-9,525-12 |
| Als-040-B-12-16 |
| Als-080-Y-32h-42n |
| 121-25-20g Elektromagnetkupplung |
| Als-105-R-45-45 |
| Al110 |
| Als-055-R-19n-25h |
| Als-055-B-20h-24n |
| Als-080-R-32h-45 |
| Als-055-B-15-19h |
| Als-080-Y-30h-35h |
| Als-030-B-9-12 |
| Als-030-B-8-14n |
| Als-040-R-11-16h |
| Als-055-Y-18-20h |
| Als-040-B-16h-19n |
| Mm-16k Couplings |
| 125-10-12? Elektromagnetische Bremse Kupplung |
| Als-040-B-16-19n |
| Als-055-B-15h-28h |
| Als-080-Y-38h-42n |
| Als-055-B-24h-24h |
| Als-040-Y-15h-20h |
| Als-080-Y-32h-45 |
| 122295100 Brake 111-10-12g 24v 25jis |
| Als-055-B-18h-25 |
| Als-065-Y-28-32 |
| Als-040-R-14h-18h |
| Als-055-R-20-28n |
| Als-065-Y-28-28n |

[Als-014-R-6-6,35](#)

[Als-055-B-19n-28](#)

[Als-065-Y-24h-32](#)

[Als-080-Y-38h-45](#)

[Als-040-R-11-19n](#)

[Als-055-B-15-19n](#)

[Als-055-B-28-28](#)

[Als-105-B-40-50](#)

[Als-080-Y-32-32h](#)

[Als-055-R-16h-28n](#)

[Als-040-B-14n-15h](#)

[Als-040-R-19n-20](#)

[Als-065-R-28-28n](#)

[Als-055-B-19h-19n](#)

[Als-055-Y-24n-25](#)

[Als-065-B-30-30](#)

[Als-080-Y-38-45](#)

[Als-055-R-18-28n](#)

[Als-065-Y-25h-32h](#)

[Als-055-Y-28-28](#)

[Als-055-Y-19h-25h](#)

[Als-080-R-42-45h](#)

[Als-040-Y-11-11](#)

[Als-055-R-18-19h](#)

[Als-055-R-18h-24h](#)

[Als-080-B-38-38h](#)

[??-185-??-28n Variator](#)

[Als-080-R-32-38](#)

[Als-080-R-42-42](#)

[Als-055-Y-20h-28h](#)

[Als-014-R-4-6](#)

| |
|--|
| Als-040-Y-15h-19n |
| Als-040-Y-14n-16 |
| Als-080-B-35-40 |
| Pe-185-Ma-22h Variable Kopplung Pds-15 |
| Als-055-Y-24n-28n |
| Als-080-R-38-45 |
| Als-055-B-16h-24n |
| Als-065-B-28-32h |
| Als-065-Y-35-35h |
| Als-040-B-15h-16h |
| Als-080-B-38n-40h |
| Als-055-Y-15h-20h |
| Als-065-Y-25h-32 |
| Als-055-R-20-24n |
| Als-080-B-45h-45h |
| Als-065-Y-24-25 |
| Als-080-B-32h-38 |
| Als-030-R-8-14 |
| Als-065-B-24-35h |
| Als-065-R-24-25h |
| Als-080-R-38h-45 |
| Als-055-B-20-24h |
| Als-065-Y-20-35 |
| Als-020-Y-6-6 |
| Als-080-Y-38n-40h |
| Als-080-Y-38n-42n |
| Als-014-Y-4-6,35 |
| Als-040-Y-18-18h |
| Als-055-R-15h-19n |
| Als-055-Y-18h-28 |

[Als-040-B-14n-18](#)

[Als-030-Y-9-9](#)

[Als-030-Y-12h-14](#)

[Als-055-R-24h-28n](#)

[Als-065-B-20-25](#)

[Als-055-R-15-24h](#)

[Als-055-B-15-25](#)

[Als-055-B-19h-25h](#)

[Als-040-R-15h-15h](#)

[Als-065-B-28n-28n](#)

[Als-080-Y-30-42](#)

[Als-020-Y-6-8](#)

[Als-080-Y-35-38](#)

[Als-040-B-18h-18h](#)

[Als-065-R-28-32h](#)

[Als-080-Y-32h-35h](#)

[Als-055-B-24-24n](#)

[Als-080-Y-35h-38h](#)

[Als-080-Y-35h-40h](#)

[Als-065-Y-24-35](#)

[Als-055-B-15h-28](#)

[Als-080-Y-30h-32h](#)

[Als-065-R-24h-32h](#)

[Als-040-R-20-20](#)

[Als-030-Y-9-10](#)

[Als-040-B-14-14](#)

[Als-040-B-15-20](#)

[Als-055-R-20h-20h](#)

[Als-055-B-15h-20h](#)

[Als-080-R-30-32](#)

[Als-065-B-28h-28n](#)

| |
|-------------------------------------|
| Als-020-R-5-9 |
| Als-080-Y-42-45 |
| Als-080-B-35h-38 |
| Als-040-Y-14h-16 |
| Als-040-B-16h-19h |
| Als-065-B-24n-32h |
| Als-030-Y-8-12 |
| Als-065-R-24h-28 |
| Als-055-R-18h-25h |
| Als-080-B-30h-40h |
| Als-105-R-55-55 |
| Als-055-R-16-16 |
| Als-065-B-25-30h |
| Als-040-Y-11-14h |
| Als-020-R-5-5 |
| Als-080-R-30-42h |
| Als-030-R-9.525-12h |
| Als-055-B-16-24n |
| Als-040-R-14n-15h |
| Als-040-Y-20h-20h |
| Als-055-R-16-19n |
| Als-065-R-25-30 |
| Als-095-R-50-50 |
| Als-040-R-14-16h |
| Als-040-B-15h-16 |
| Als-080-B-35h-38h |
| Als-095-B-42-50 |
| Als-065-B-25-30 |
| Als-014-Y-3-5 |
| Als-030-Y-9,525-12 |

| |
|------------------------------------|
| Als-055-B-18-19 |
| Als-080-Y-32-45h |
| Als-040-R-14n-19n |
| Als-040-Y-14n-18h |
| Als-040-R-14h-20h |
| Als-065-Y-32-35 |
| Als-080-Y-32h-38h |
| Als-055-R-24-28 |
| Als-065-R-20h-35h |
| Als-040-R-19h-20h |
| Als-065-B-20-20 |
| Als-030-B-9,525-14 |
| Als-065-Y-35h-35h |
| Als-040-Y-14h-19h |
| Als-055-R-16-20h |
| Als-030-B-12h-14h |
| Als-040-Y-11-14 |
| Als-080-R-32-40 |
| Als-055-Y-15h-20 |
| Als-030-R-11-14n |
| Als-040-B-16h-18h |
| Als-105-B-38-40 |
| Als-065-B-20h-28n |
| Als-030-R-11-14h |
| Als-065-Y-28-30h |
| Als-065-R-24-32h |
| Als-065-B-20-25h |
| Als-080-Y-38n-38n |
| Als-040-B-11-12 |
| Als-040-R-12-14h |
| Als-055-B-18-24h |

[Als-030-Y-8-12h](#)

[Als-055-Y-20-25](#)

[Als-080-R-32-35](#)

[Als-055-Y-24h-24h](#)

[Als-065-B-32h-35h](#)

[Als-065-Y-20h-24h](#)