

## Oku

Garanti: 12 ay  
Bu ¼r¼ne ait T¼rkiye i¼i kapı teslim fiyat ve teslim s¼resi i¼eren teklifimizi almak i¼in **info@yursat.com.tr** e-posta adresine baŐvuru yapabilir ya da ayrıntılı bilgi i¼in +90 224 240 03 04 numaralı telefonumuzdan bizlere ulaŐabilirsiniz.  
**Oku** Markası, tedarik s¼resi i¼in l¼tfen bizimle iletiŐime ge¼iniz.

*Firmamız Oku T¼rkiye Distrib¼t¼r¼ veya temsilcisi deĐildir. Firmamız sipariŐ durumunda, belirtilen ¼r¼nlerde sadece Orjinal ve yeni ¼r¼n teklifi sunmaktadır. Bu sitede g¼sterilen ¼zel marka adları ve ticari markalar ilgili sahiplerinin m¼lkiyetindedir, talep durumunda kaldırılmaktadır.*



¼r¼n	A¼ıklama
<a href="#">11570</a>	VIBRATION AMPLITUDE CONTROL 6AMP 230V 50-60HZ
<a href="#">U1222000600112</a>	BOARD
<a href="#">Bl4d7575a</a>	DRIVE
<a href="#">E0105-800-059-1</a>	OPERATOR PANEL
<a href="#">A911-1120-01-01-0</a>	PC BOARD OPUS 5000 EC 72 IN / 16 OUT
<a href="#">E010espa10137</a>	INDUSTRIAL BOARD POWER SUPPLY
<a href="#">Bl3d75</a>	SERVO AMPLFR
<a href="#">Erj7200d</a>	ENCODER
<a href="#">Osp700l</a>	CRT
<a href="#">Osp-U10l</a>	CONTROL INTERFACE MODULE
<a href="#">E4809-436-088</a>	INTERNAL ENCODER HC TYPE
<a href="#">191116423789662</a>	PC BOARD OPUS 5000-II CRPB-II XPS-442B

<a href="#">U0213000600111bl</a>	MODULE
<a href="#">U0632000600111</a>	SERVO DRIVE
<a href="#">U1233000600110</a>	DRIVER
<a href="#">E4809-045-110-D</a>	PC BOARD SPC1 OPUS 5000II
<a href="#">E4809-032-496-B</a>	TIMING BOARD OPUS 5000 SERVO PROCESSER
<a href="#">Er-Jb-7200d</a>	ENCODER INTERNAL ABSOLUTE
<a href="#">E4809045039</a>	BOARD
<a href="#">E4809-032-496-E</a>	PC BOARD
<a href="#">E4809-045-039-D</a>	AXIS BOARD CPU MEMORY OPUS 5000
<a href="#">E4809-436-014-A</a>	PC BOARD
<a href="#">U7950006019r</a>	SERVO AMPLFR
<a href="#">E4809-032-398-B</a>	DATA BOARD OSP3000
<a href="#">Bl-Mc150j-20sb</a>	SERVO MOTOR 2000RPM 16KW
<a href="#">Osp7000m</a>	OPERATOR INTERFACE
<a href="#">U7950006205r</a>	BOARD
<a href="#">A9192300</a>	SDU BOARD
<a href="#">A005801701010</a>	ENCODER
<a href="#">A9112201r</a>	PC BOARD
<a href="#">Vac-Ymf22/18.5-153kr4</a>	MOTOR SPINDLE 170VAC 30MIN RATING
<a href="#">E3051-396-012-4</a>	ENCODER 4M CABLE
<a href="#">Vac-Mf7-3.7/2-2r-151-R4</a>	MOTOR AC SPINDLE
<a href="#">1911-1640-0196-852</a>	PC BOARD OPUS 5000-II CRPB-II XPS-443B
<a href="#">U79500060447</a>	DRIVE
<a href="#">I006-0630-39-046</a>	SERVO DRIVE BLII-D 50AMP
<a href="#">Px-Mbf250j-15tb-A</a>	SERVO MOTOR 32.6AMP 77V 6POLE 75HZ 1500RPM 3PH
<a href="#">Blmc150e12sb</a>	SERVO MOTOR 133V 1200RPM
<a href="#">D8-A-11/7.5kw</a>	DRIVE 11/7.5KW TYPE A LB15
<a href="#">E4809-436-011-C</a>	PC BOARD
<a href="#">E0227-702-010</a>	BUBBLE MEMORY BOARD 4MBIT X4 OPUS 5000
<a href="#">U7950006027r</a>	PC BOARD

<a href="#">A911-1692r</a>	PC BOARD OPUS 5000-II CRPB-II XPS-442A
<a href="#">5020-Lsy</a>	OPERATOR COLOR MONITOR
<a href="#">E4809-770-021-D</a>	PC BOARD
<a href="#">1006-1106-31-229</a>	PC BOARD CONTROL CPU
<a href="#">A9112891</a>	PC BOARD
<a href="#">E4809-045-088</a>	PC BOARD
<a href="#">U1222000600110</a>	DRIVE
<a href="#">U7950006029r</a>	SERVO AMPLFR
<a href="#">Bl4d200a</a>	BOARD
<a href="#">E7191-855-021</a>	CPU BOARD STORAGE RACK
<a href="#">E4809-436-013-D</a>	PC BOARD
<a href="#">Er-Fc-2048d</a>	ENCODER ABSOLUTE POSITION OSP
<a href="#">E7191-183-329</a>	RACK 17B CPU/IF OPUS5000
<a href="#">E4809-032-398-A</a>	DATA BOARD OSP3000
<a href="#">A9112101r</a>	PC BOARD
<a href="#">U1231000600310</a>	DRIVE
<a href="#">1911-2820</a>	CNC COMPACT MAIN BOARD
<a href="#">A0054367800</a>	MOTOR
<a href="#">E4809-032-399-F</a>	PC INTERFACE BOARD
<a href="#">E4809-045-109-C</a>	PC BOARD SVP OPUS 5000-II
<a href="#">E0105-800-138-1</a>	OPERATOR INTERFACE OSP5020L
<a href="#">U15340911800</a>	MODULE
<a href="#">U22650006004r</a>	DRIVE
<a href="#">Mx45vae</a>	VERTICAL MACHINING CENTER W/ PALLET CHANGER 2000
<a href="#">Osp-5000I-G</a>	OPERATOR INTERFACE
<a href="#">A911-1151r</a>	PC BOARD ASSEMBLY OPUS5000 PANEX CARD2
<a href="#">Bl-Mh101e-20s</a>	SERVO MOTOR 2KW 3PHASE 2000RPM 166V 100HZ
<a href="#">Bl-Mp500j-20sb</a>	SERVO MOTOR 7.1KW 2000RPM 54.8NM 51.3AMP W/OUT ENC
<a href="#">7000I-S-Ce</a>	OSP MACHINE PANEL
<a href="#">E0451-521-051</a>	POWER SUPPLY OPUS 5000 RHP
<a href="#">A0054168800</a>	MOTOR

<a href="#">E-0105-437-051</a>	OPERATING PANEL 500GLS 9IN MONITOR
<a href="#">Miv03-1-P1</a>	SERVO DRIVE 4HP 3KW
<a href="#">E4809-045-010-B</a>	I/O ISOLATION BOARD OSP3000
<a href="#">A9111961r</a>	CONTROL DISPLY
<a href="#">Bl-D-30-A</a>	SERVO AMPLIFIER 21AMP MAX CURRENT Y-AXIS MOUNT
<a href="#">Bdu-50a</a>	SERVO DRIVE BRUSHLESS UNIT 33AMP 3PHASE
<a href="#">E4809-436-018-C</a>	PC BOARD
<a href="#">E4809-045-106-E</a>	PC BOARD CRP II-C OPUS 5000-II
<a href="#">Bl-Me120j-40sn-A</a>	SERVO MOTOR 3000RPM 159V 3PHASE
<a href="#">Ml121pn5020</a>	LCD, UPGRADE KIT OKUMA OSP5020L
<a href="#">1911156117236</a>	PC BOARD
<a href="#">U1222000600111</a>	HARDWARE
<a href="#">E4809-436-003-A</a>	PC BOARD
<a href="#">E4809032496-C</a>	PC BOARD
<a href="#">Bl-Mc100e-20tb</a>	SERVO MOTOR 133V 8.91A 2000RPM 133HZ
<a href="#">100611105839</a>	SERVO DRIVE
<a href="#">2660813013</a>	UNIT
<a href="#">U7950006026</a>	DRIVE
<a href="#">E30513960111</a>	ENCODER (TS5270N6)
<a href="#">1912-0407</a>	PB BOARD CONTROL/PROCESSOR
<a href="#">U2360000600410</a>	DRIVE
<a href="#">A005-7002-800</a>	SERVO MOTOR
<a href="#">W1000-130-084-A1</a>	UNIT POWER SUPPLY TRANSFORMER 60KVA
<a href="#">Exp1260a</a>	PC BOARD
<a href="#">U0213-0006-001-11</a>	DRIVE BL-III-D SERVO AMPLIFIER
<a href="#">Bl-D75a</a>	SERVO AMPLIFIER 75AMP S AXIS
<a href="#">Sv1-1-8</a>	CONTROLLER 110-230V AC 50/60HZ .1AMP 8AMP MAX
<a href="#">Bl-Mh-401e-12s</a>	SERVO MOTOR
<a href="#">E4809-032-397-D</a>	PC BOARD INR OSP3000
<a href="#">A911151201010</a>	MODULE

<a href="#">E4809-436-034-B</a>	PC BOARD
<a href="#">19112100</a>	PC BOARD MAIN MB1
<a href="#">E4809-045-148-C</a>	MAIN BOARD
<a href="#">A005801401010</a>	ENCODER
<a href="#">Bl-Mc200j-20sn-A</a>	SERVO MOTOR 14.7AMP 157V 133HZ 2000RPM
<a href="#">A9111110</a>	BOARD
<a href="#">BlII-D50-30a</a>	DRIVE SERVO DRIVE 30AMP
<a href="#">BlD7550</a>	SERVO AMPLFR
<a href="#">A0054176800</a>	MOTOR
<a href="#">1006-0632-71-35</a>	DRIVE OPEN TYPE 75AMP
<a href="#">E4809-747-005-D</a>	PC BOARD FIRING CARD PPS-60C
<a href="#">Fub-P4r2</a>	PC BOARD W/CASING
<a href="#">Bdu-15-1a</a>	SERVO DRIVE BRUSSLESS UNIT
<a href="#">U0212000600110bl</a>	BOARD
<a href="#">E4809-820-004-C</a>	PC BOARD BLII-D POWER BOARD
<a href="#">E4809-091-E</a>	PC BOARD
<a href="#">U0213000600110</a>	PC BOARD
<a href="#">E04515210511</a>	POWER SUPPLY
<a href="#">E4806-045-013-A</a>	PR-HF-PP BOARD
<a href="#">E0451-521-016</a>	POWER SUPPLY
<a href="#">E0105653428</a>	OPERATOR PANEL
<a href="#">100611024947</a>	SERVO DRIVE
<a href="#">E4809-045-010-A</a>	I/O ISOL BOARD
<a href="#">Bl-2d-75-75a</a>	SERVO DRIVE BLII-D
<a href="#">E0451-521-037</a>	POWER SUPPLY
<a href="#">I006-0630-48-011</a>	SERVO DRIVE BLII-D
<a href="#">BlII-D150a</a>	SERVO DRIVE AC
<a href="#">E4809045145c1</a>	PC BOARD
<a href="#">Wchg-60a/50a</a>	SPINDLE MOTOR WINDING CHANGEVER UNIT
<a href="#">Ml104cv5020</a>	LCD KIT

<a href="#">Miv01a-1-B5</a>	SERVO DRIVE UNIT
<a href="#">U7950006009</a>	SERVO DRIVE
<a href="#">Bld50d</a>	SERVO AMPLIFIER
<a href="#">H0001000307</a>	ACTUATOR
<a href="#">E4809-045-035-C</a>	MAIN BOARD OPUS 5000 SERVO PROCESSOR
<a href="#">Vac5d6</a>	DRIVE
<a href="#">E0451-521-046</a>	POWER SUPPLY OPUS 5000 RLP
<a href="#">100606291514</a>	SERVO DRIVE
<a href="#">E0105680005</a>	DISPLAY PANEL
<a href="#">A911-1520r</a>	PC BOARD MAIN II-B
<a href="#">Mps10</a>	POWER SUPPLY