

## Vaisala Sensor Sys

Garanti: 12 ay  
Bu ¼r¼ne ait T¼rkiye i¼i kapı teslim fiyat ve teslim s¼resi i¼eren teklifimizi almak i¼in [info@yursat.com.tr](mailto:info@yursat.com.tr) e-posta adresine baŐvuru yapabilir ya da ayrıntılı bilgi i¼in +90 224 240 03 04 numaralı telefonumuzdan bizlere ulaŐabilirsiniz.  
**Vaisala Sensor Sys** Markası, tedarik s¼resi i¼in l¼tfen bizimle iletiŐime ge¼iniz.

*Firmamız Vaisala Sensor Sys T¼rkiye Distrib¼t¼r¼ veya temsilcisi deĐildir. Firmamız sipariŐ durumunda, belirtilen ¼r¼nlerde sadece Orjinal ve yeni ¼r¼n teklifi sunmaktadır. Bu sitede g¼sterilen Özel marka adları ve ticari markalar ilgili sahiplerinin m¼lkiyetindedir, talep durumunda kaldırılmaktadır.*



¼r¼n	A¼ıklama
<a href="#">Hmp233a2a1a2ee12x1a3b</a>	HUMIDITY/TEMPERATURE TRANSMITTER 115VAC
<a href="#">Hmt3305l0a004bc</a>	TRANSMITTER
<a href="#">Hmp233a1b1a1aa12a1a3b</a>	TEMPERATURE AND HUMIDITY TRANSMITTER .1AMP 115VAC
<a href="#">D0a0f0b1</a>	METER
<a href="#">Hmp-135y</a>	TRANSMITTER HUMIDITY/TEMP HI TEMP 11-30VDC 4-20MA
<a href="#">Hmp231d1a0a2dd23c1a3b</a>	TRANSMITTER HUMIDITY/TEMPERATURE 24VDC/AC
<a href="#">Hmrl1</a>	HUMIDITY METER
<a href="#">Hmt3305m0b131dda</a>	TRANSMITTER
<a href="#">Dmt347</a>	TRANSMITTER
<a href="#">3e0b101bcdc203a0</a>	TRANSMITTER
<a href="#">Hmp233-D2b0a2aa42a1b3b</a>	TRANSMITTER HUMIDITY/TEMPERATURE 24V DC/AC
<a href="#">Hmt3307s0a005bca</a>	HUMIDITY CTRL

<a href="#">Dmt242</a>	DEWPOINT TRANSMITTER
<a href="#">Hmt3303e0a001bca</a>	TRANSMITTER
<a href="#">Hmt333</a>	HUMIDITY AND TEMPERATURE TRANSMITTER
<a href="#">Hmt3303g0b105hba</a>	TRANSMITTER HUMIDITY/TEMPERATURE
<a href="#">Hmp233a2c0a2aa12a1a3b</a>	TRANSMITTER HUMIDITY/TEMPERATURE 24V DC/AC
<a href="#">Hmp235-A2b1a1aa12a1a3b</a>	HUMIDITY/TEMPERATURE TRANSMITTER 115VAC 0.1A 60HZ
<a href="#">Hmp233d1c0a2aa12a2b3b</a>	HUMIDITY AND TEMPERATURE TRANSMITTER 24VDC
<a href="#">Hmp233a2b0a2aa12a1b3b</a>	TRANSMITTER HUMIDITY/TEMPERATURE 24V DC/AC
<a href="#">Dmp246cs</a>	COOLING SET
<a href="#">Hmp233-A1a0a2aa12a2b3a</a>	HUMIDITY/TEMPERATURE TRANSMITTER 24VDC
<a href="#">Hmt364-A12bcj2b6be1a3a6</a>	HUMIDITY/TEMPERATURE TRANSMITTER 28V W/PROBE
<a href="#">Hmi-41</a>	TEMPERATURE INDICATOR HUMIDITY
<a href="#">Hmp231a1a0a2aa12a2</a>	HUMIDITY AND TEMPERATURE TRANSMITTER 24V
<a href="#">Hmp36</a>	TEMP/HUM PROBE
<a href="#">Hmp235-D2c1a1aa12a1a3b</a>	HUMIDITY/TEMPERATURE TRANSMITTER 115VAC 0.1A 60HZ
<a href="#">Hmi31hmp35</a>	PYROMETER
<a href="#">Hmp233a1d0a2aa12b2c</a>	TRANSMITTER HUMIDITY AND TEMPERATURE 24VDC/AC
<a href="#">Mmt337</a>	TRANSMITTER MOISTURE TEMPERATURE 10-35VDC
<a href="#">Hmt3308v0a101bca</a>	TRANSMITTER
<a href="#">Hmt363</a>	TRANSMITTER TEMP AND HUMIDITY 12-28VDC WALL MOUNT
<a href="#">Hmt337</a>	TRANSMITTER HUMIDITY-TEMP 0-100PERCENT RH -40-356F
<a href="#">Hmp235a2a1a2aa12a2c3a</a>	TRANSMITTER HUMIDITY AND TEMPERATURE
<a href="#">Pt330b0acjaaceb</a>	PRESSURE TRANS
<a href="#">G1cxa1d3a0asx</a>	TRANSMITTER
<a href="#">3f0a021bcag200a01aabaa1</a>	HUMIDITY AND TEMPERATURE TRANSMITTER 100-240V
<a href="#">Hmi31</a>	TEMP/HUM PROBE
<a href="#">Dmt348</a>	TRANSMITTER DEWPOINT AND TEMPERATURE 35VDC
<a href="#">Hmp235-C2b0a1aa61a1c3b</a>	HUMIDITY AND TEMPERATURE TRANSMITTER 24V LCD
<a href="#">Hmi31hmp36</a>	TEMP/HUM PROBE
<a href="#">1a0b101bcab100a0</a>	TRANSMITTER

<a href="#">Hmp37e</a>	PROBE
<a href="#">Dmt3408w0b1c1xxa1b001a1aab0</a>	DEW POINT TRANSMITTER
<a href="#">A1dcd120a0x</a>	TRANSMITTER
<a href="#">Dm70kit</a>	METER
<a href="#">Hmp233a1a0a3aa12</a>	HMT333 HUMIDITY AND TEMPERATURE TRANSMITTER
<a href="#">Dmt3408w0b1a1kea</a>	POWER SUPPLY/ DMT340-8W0B1A1KEA1B001A1AAA0A0
<a href="#">Hmp233a2f0a2aa12b2c3b</a>	TRANSMITTER HUMIDITY AND TEMPERATURE 24VAC
<a href="#">Hmt360-4a12bcj2b4be1a30</a>	HUMIDITY/TEMP TRANSMITTER 20MA
<a href="#">Hmp233 A1a0a2aa12a1a3b</a>	TRANSMITTER HUMIDITY/TEMPERATURE 24VDC/AC
<a href="#">Hmt360-1a22bcx1a2ba1a10</a>	SENSOR TEMP/RH 4-20MA OP
<a href="#">Hmt3305l0a001bca</a>	SENSOR
<a href="#">Dmt152a1dx310a60</a>	TRANSMITTER
<a href="#">Dmt242b</a>	TRANSMITTER DEW POINT -76 TO +104F
<a href="#">Hmp233a1b1a2aa12a2a</a>	HUMIDITY AND TEMPERATURE TRANSMITTER .1AMP 115VAC
<a href="#">Hmt3301aoa101bca</a>	SENSOR
<a href="#">3e0a135bcax100a0</a>	TRANSMITTER
<a href="#">Hmp235-A2a0a1aa12x1c3b</a>	TRANSMITTER HUMIDITY TEMPERATURE 24VDC/AC
<a href="#">Hmp233-A2a0a2aa12a2b3</a>	TRANSMITTER HUMIDITY/TEMP RHT 24VDC/AC HUMICAPK
<a href="#">Hmp233-C1a0a2aa61a1b3b</a>	HUMIDITY AND TEMPERATURE TRANSMITTER 24VDC/AC
<a href="#">Hmp233-A2a1a2dd12a2a3b</a>	TRANSMITTER HUMIDITY TEMPERATURE .1A 115VAC 50/60H
<a href="#">Hmi41setd1b</a>	KIT
<a href="#">Hmp234b2b1a1aa13</a>	TRANSMITTER
<a href="#">Hmp233</a>	HUMIDITY/TEMPERATURE TRANSMITTER
<a href="#">Hmt3303e0b101deh</a>	TRANSMITTER
<a href="#">Hmp-46</a>	TEMPERATURE PROBE HUMIDITY
<a href="#">Hmt330180b001bcd</a>	TRANSMITTER
<a href="#">Hmk-15</a>	HUMIDITY THERMOMETER CALIBRATOR
<a href="#">Dmp246</a>	DEW POINT TRANSMITTER
<a href="#">Hmp235</a>	TRANSMITTER HUMIDITY TEMPERATURE -20-180DEG CEL
<a href="#">Hmp233-A2a0a2aa12a1b3</a>	TRANSMITTER HUMIDITY/TEMPERATURE 24V DC/AC