



# GMXSH Disc Brake Caliper - Spring Applied, Hydraulically Released

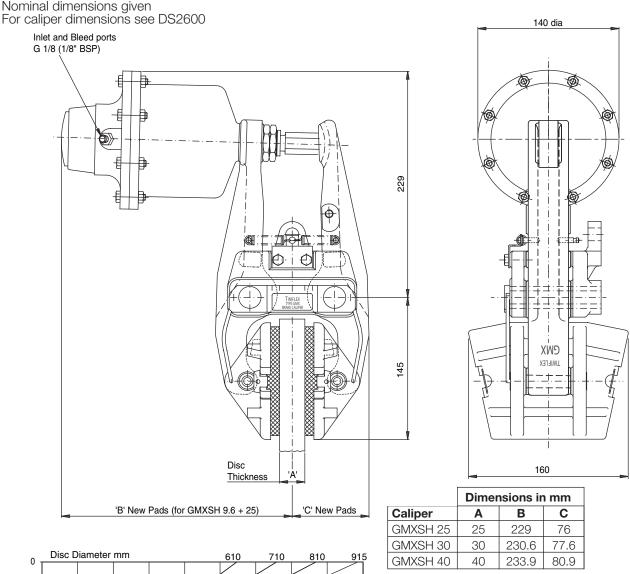

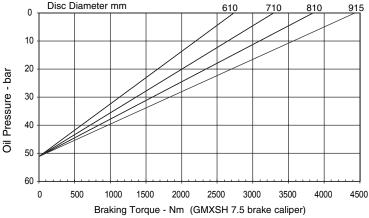

Weight	XSH 9.6	caliper	and	thruster	- 13.82kg
O					- 13.62kg
					- 13.22kg

Caliper only - 9.22kg

Volume displacement of thruster at 6mm Retraction is 9.1 ml

### Maximum pressure - 120 bar

Thruster	Maximum Braking Force - kN	Minimum Pressure for Full Retraction - bar
XSH 9.6	14.3	82
XSH 7.5	11.2	65
XSH 4.6	6.8	40


The ratings shown on the above graph are based on fully bedded and conditioned brake pads with nominal friction coefficient  $\mu = 0.4$ .

For bedding-in and conditioning procedures see Publication M1060.

Braking Force is defined as the Tangential Force acting on the brake disc at the Effective Disc Radius. Braking Torque (Nm) = Braking Force (N) x Effective Disc Radius (m) where Effective Disc Radius = Actual Disc Radius - 0.06.

Twiflex Disc Brakes must be used with Twiflex asbestos free brake pads. The use of any other brake pads will invalidate the warranty. Twiflex Limited reserves the right to modify or change the design without prior notice.

## GMXSH Disc Brake Caliper - Spring Applied, Hydraulically Released

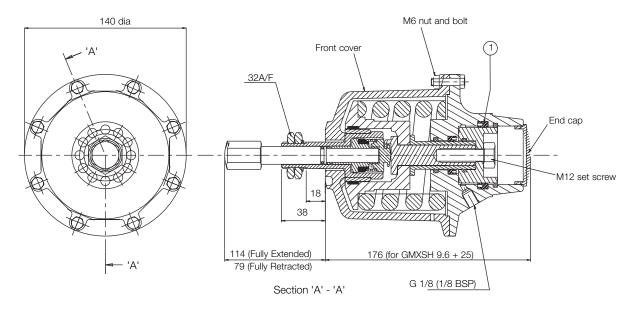

AVAILABLE SPARES					
Item	Component	Part No.			
1	Seal Kit	6000356			

#### **Thruster Part Number:**

XSH 9.6 7500357 XSH 7.5 7500147 XSH 4.6 7500163

This thruster requires no routine maintenance but if it becomes necessary to dismantle it for any reason, it is important to remember that it houses a powerful compressed spring.

The sequence in which it is dismantled should be as follows

- 1. Remove from caliper
- 2. Unscrew and remove the push rod
- 3. Remove the 8 M6 nuts and bolts securing the front cover (see drawing)
- 4. Remove the complete front cover assembly
- 5. Remove the M12 set screw (see drawing)


All the internal parts may now be dismantled for inspection or replacement. Re-assembly is carried out by reversing the above sequence.

Tighten torque for the M12 set screw is 80 Nm

Tighten torque for the M6 bolts is 10 Nm

#### **Thruster fitment**

- 1. Make sure the thruster rod is extended i.e.it is not pressurised.
- 2. Take hold of the thruster and turn the push rod via the hex portion clockwise until it stops rotating: so a 'clicking' can be heard from the ratchet. Do this by hand, do not apply heavy force to push the rod once it stops turning.
- 3. Offer thruster to caliper making sure that both lock nuts are removed before placing hex section of push rod through caliper arm.
- 4. Pull caliper arms apart so that the pads are hard against the disc.
- 5. Fit lock nuts to thruster body loosely and unwind push rod until the gap between the body and the arm is 6mm. Make sure that the hex section of the push rod is within the slot of the other arm.
- 6. Tighten first lock nut to 50 60Nm then tighten the second nut against the first.
- 7. Fit tension spring to arms.

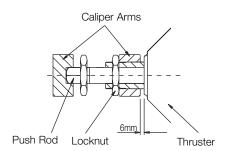



www.twiflex.com

9 Briar Road, Twickenham Middlesex TW2 6RB - England +44 (0) 20 8894 1161 Fax: +44 (0) 20 88755 5601

